

Quick Set-Up Guide


Please read the Operating Instructions for further details.

Step 1

Setting Up the Base Unit and Charger Unit


Base unit

Fasten the AC adaptor cord to prevent it from being disconnected.

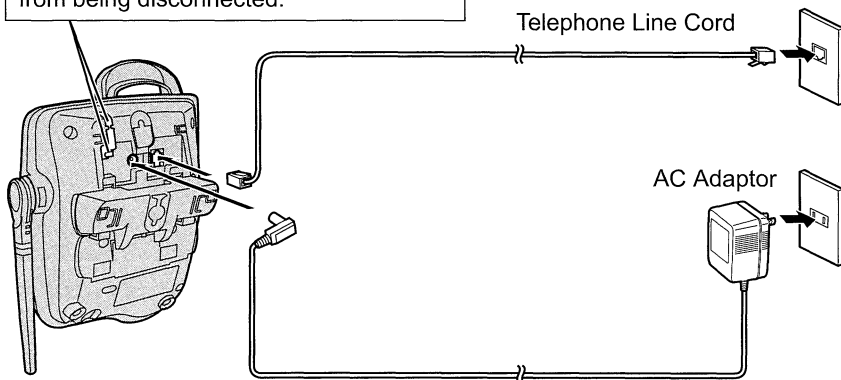

- Base unit: USE ONLY WITH Panasonic AC ADAPTOR PQLV1.
- Use only the telephone line cord included in the unit.
- Make sure that the AC adaptor and telephone line cords are plugged into the unit properly.

Charger unit

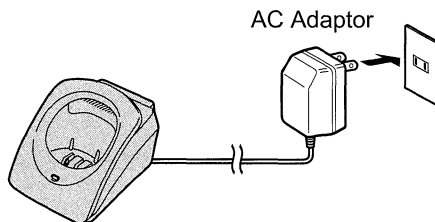


- Charger unit: USE ONLY WITH Panasonic AC ADAPTOR KX-TCA1.

Step 2

Setting Up the Handset


Install the battery.

Insert the battery (①), and press it down until it snaps into the compartment (②). Close the cover.

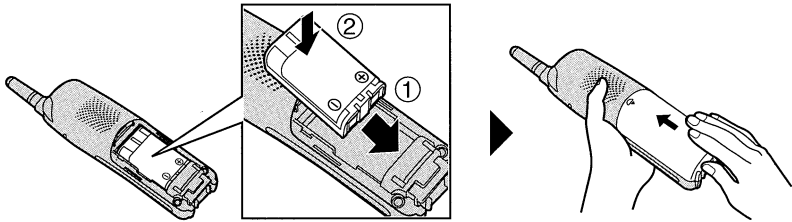

Charge the battery for 6 hours before initial use.

- The unit beeps once, the CHARGE indicator lights, and "Charging" is displayed.
- When the battery is fully charged, "Charge completed" is displayed.

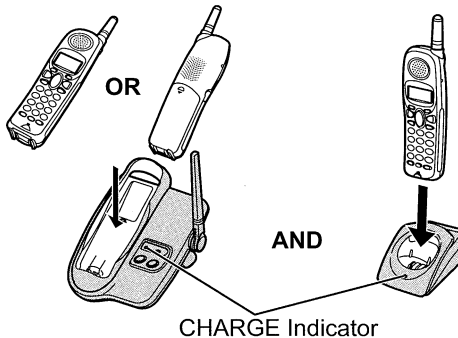

Step 3

Subscription Service

In order to use **Caller ID**, **Call Waiting**, **Call Waiting Caller ID** or **Voice Mail**, you must first subscribe to the desired service.


For more information, contact your telephone company.

If you want to use the Call Waiting Caller ID feature, but it does not function at all.


You may need to contact your telephone company to activate this specific service, even if you already subscribed to both Caller ID and Call Waiting with Caller ID services (CWID).

Location of Controls

Handset

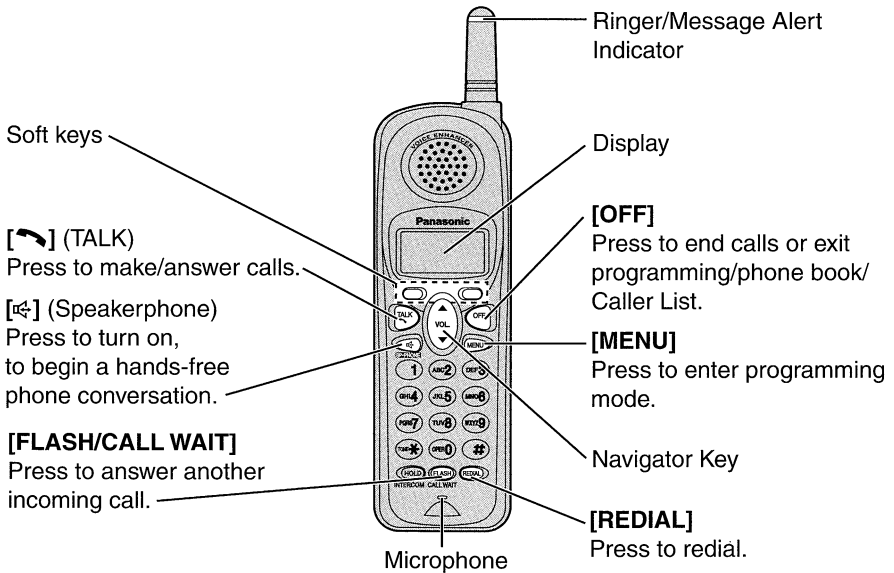

Handset soft keys



Two soft keys are used to select functions displayed directly above each key. Functions displayed above the keys will change depending on the state of use.

On this sample display, "↓ (VE)" and "Mute↓" are displayed above soft keys.



Pressing the right soft key selects mute "Mute↓".

Pressing the left soft key selects Voice Enhancer "↓ (VE)".

- When a function name does not appear above a soft key, the soft key has no function.

Handset navigator key



Scrolls up [▲] and down [▼] the function menu, the Caller List and the phone book.

Increases [▲] or decreases [▼] the handset ringer and receiver/speaker volumes.

Throughout this guide:

- The soft keys are indicated by what is displayed above the keys.
Ex. "Press **Mute**." indicates "Press the soft key below **Mute↓**".
- The navigator key is indicated by the arrows [▼] or [▲].

Using Phone Book

a) Storing Names and Numbers

Press Phone book, Add then enter a name and phone number using dialing buttons (0–9), navigator keys (▼, ▲) and soft keys by following display.

(Refer to page 29 in the Operating Instructions for details.)

b) Dialing from the Phone Book

Press Phone book, then Search. Search for the desired item by pressing [▼] or [▲], then press [↶] or [↷].

(Refer to page 31 in the Operating Instructions for details.)

c) Chain Dial

You can dial a combination of phone book or manual key pad entries while making a call. This feature can be used, for example, to first automatically dial a calling card access number that you have stored in the phone book, then manually or automatically dial your PIN and then automatically dial the destination number from the phone book.

Press [MENU] while you are on a call. Search for the desired item by pressing [▼] or [▲], then press Call.

- If required, repeat steps for any remaining numbers.

(Refer to page 32 in the Operating Instructions for details.)

Using Caller List

Please make sure that you have already subscribed to Caller ID service.

a) Viewing the Caller List

Press Rcvd calls, then press [▼] to search the Caller List.

(Refer to page 23 in the Operating Instructions for details.)

b) Calling Back from the Caller List

Press [↶] or [↷] while you are viewing a phone number to call back.

If you need to edit a phone number before calling back, press Select. You can delete "1" or "1 with area code" by pressing Edit repeatedly.

(Refer to page 24 in the Operating Instructions for details.)

c) Caller ID Number Auto Edit

Once you call back an edited number (see above), this unit can automatically edit incoming phone numbers from the same area code in the Caller List and each time you receive a call.

You need to turn on this feature. (*Factory preset is on.)

(Refer to page 26 in the Operating Instructions for details.)

Using the Other Useful Feature

Message Alert

The Ringer/Message Alert indicator on the handset will flash slowly when you have new messages in your voice mailbox.

You need to turn on this feature to use.

(Refer to page 17 in the Operating Instructions for details.)

To turn on Message Alert : Press [MENU] [0] [⌂] [1] Save.

Other Operation and Information

For information on other functions, refer to the following pages in the Operating Instructions.

Adjusting Receiver/Speaker Volume	p. 19
Selecting Ringer Tone	p. 16
Caller ID Feature.	p. 22
Phone Book	p. 29
Voice Mail Feature	p. 39
Voice Enhancer	p. 20
Direct Commands	p. 49

IMPORTANT!

If your product is not working properly. . .

1. Read this **Quick Set-Up Guide** or **Operating Instructions**
2. Visit our website: **<http://www.panasonic.com/support>**
3. Contact us via the web at: **<http://www.panasonic.com/contactinfo>**
4. Call us at: **1-800-211-PANA(7262)**

To order battery, 1-800-332-5368
<http://www.panasonic.com/batterystore>

Panasonic®


2.4 GHz Multi-Handset Digital Cordless Phone

Operating Instructions



Model No. **KX-TG2314**

Pulse-or-tone dialing capability

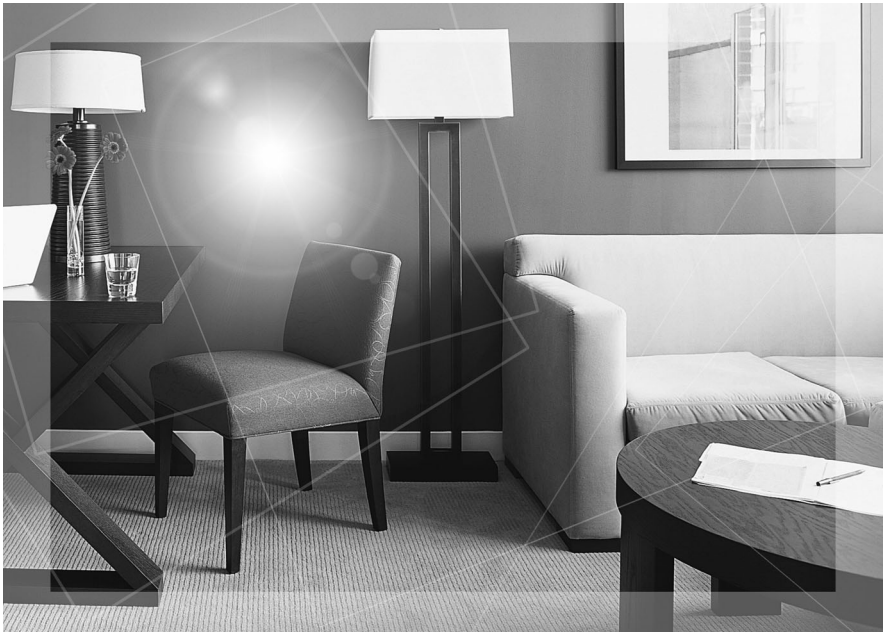

The unit is Caller ID compatible. To display the caller's name and phone number, you must subscribe to Caller ID service.

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for 6 hours before initial use.

Panasonic World Wide Web address: <http://www.panasonic.com>
for customers in the USA or Puerto Rico

Thank you for purchasing your new Panasonic cordless telephone.

Please read the IMPORTANT SAFETY INSTRUCTIONS on page 55 before use. Read and understand all instructions.





Caller ID, Call Waiting and Voice Mail Service, where available, are telephone company services. After subscribing to Caller ID this phone will display a caller's name and phone number. Call Waiting Caller ID, which displays a second caller's name and phone number while the user is on another call, requires a subscription to both Caller ID and Call Waiting with Caller ID Services (CWID). After subscribing to Voice Mail Service, this unit will give you visual indication to let you know when there are messages in the mailbox.

Attach your purchase receipt here.

Accessories (included)

For extra orders, call 1-800-332-5368.


For hearing or speech impaired TTY users, call 1-866-605-1277.

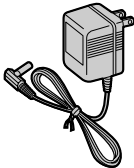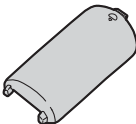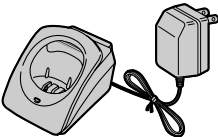☐ AC Adaptor (p. 8) Order No. PQLV1Z (PQLV1)  one	☐ Telephone Line Cord (p. 8) Order No. PQJA10075Z  one
☐ Battery (p. 9) Order No. HHR-P104  two	☐ Handset Cover (p. 9) Order No. PQKK10140Z1  two
☐ Belt Clip (p. 46) Order No. PQKE10375Z1  two	☐ Charger Unit (p. 8) Charger Order No. PQLV30023ZW AC Adaptor Order No. KX-TCA1-G (KX-TCA1)  one

For Best Performance

Battery Charge

The handset is powered by a rechargeable Nickel-Metal Hydride (Ni-MH) battery. Charge the battery for **6 hours** before initial use (p. 9).

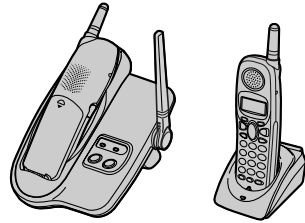


Base Unit Location/Noise

Calls are transmitted between the base unit and handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, personal computer or another cordless phone.

In a **HIGH** and **CENTRAL** location with no obstructions such as walls.

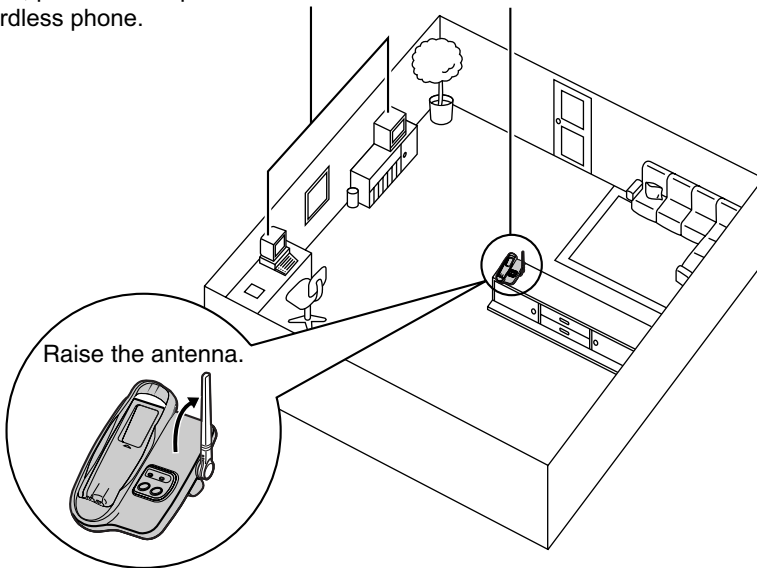

Note:

- If you use the handset near a microwave oven which is being used, noise may be heard from the receiver or the speaker. Move away from the microwave oven and closer to the base unit.
- If you use the handset near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.

Contents

Preparation

Location of Controls	6
Installation	8
Connections	8
Installing the Battery in the Handset	9
Battery Charge	9
Programmable Settings	11
Programming Guidelines . . .	11
Function Menu Table	12
Display Language	13
Dialing Mode	13
Line Mode	14
Auto Talk	14
Ringer Volume	15
Ringer Tone	16
LCD Contrast	17
Message Alert	17

Basic Operation

Making Calls	18
Answering Calls	21
Caller ID Service	22
Using the Caller List	23
Viewing the Caller List . . .	23
Calling Back from the Caller List	24
Editing the Caller's Phone Number	25
Caller ID Number Auto Edit	26
Storing Caller Information in the Phone Book	27
Erasing Caller Information . .	28

Advanced Operation

Phone Book	29
Storing Names and Numbers	29
Dialing from the Phone Book	31
Chain Dial	32
Editing an Item in the Phone Book	33
Erasing an Item in the Phone Book	33
Copying Items in the Phone Book	34
Intercom	36
Paging between Handsets . .	36
Transferring a Call	37
Conference Calls	38
Call Share	38
Voice Mail Service	39
Storing a Voice Mail Access Number	39
Setting Voice Mail (VM) Tone Detection	40
Listening to Voice Mail Messages	41
Special Features	42
Handset Locator	42
Temporary Tone Dialing (For Rotary or Pulse Service Users)	42
Muting Your Conversation . .	42
For Call Waiting Service Users	43
Using the PAUSE Key (For PBX Line/Long Distance Calls)	43
FLASH Button	44
Incoming Call Tone	44
Key Tone	45
Re-registering the Handset . .	45

Useful Information

Belt Clip 46

Optional Headset 46

Wall Mounting 47

Direct Commands 49

If the Following Appear
on Your Display... 50

Troubleshooting 52

Important Safety
Instructions 55

FCC and Other Information .. 56

Index 59

Warranty 61

Specifications 63

Preparation

Basic Operation

Advanced Operation

Useful Information

Important:
Throughout these Operating Instructions, **Handset** and **Base Unit** are used to indicate with which unit an operation can be performed.


Handset : Perform with the handset.

Base Unit : Perform with the base unit.



Handset & Base Unit : Perform with the handset and base unit together.

Location of Controls

Base unit

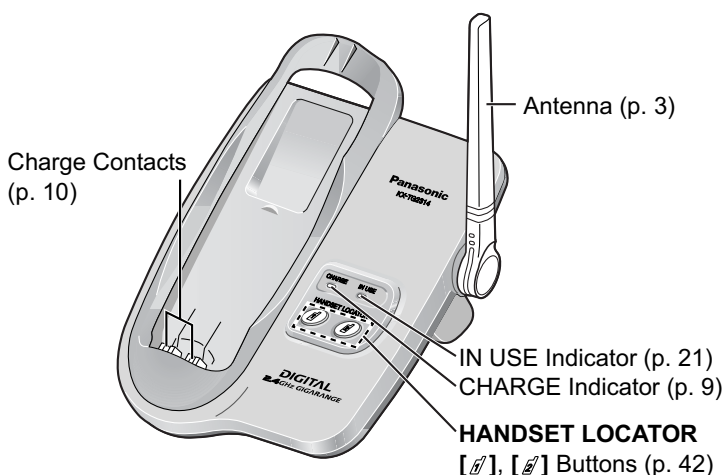


Handset

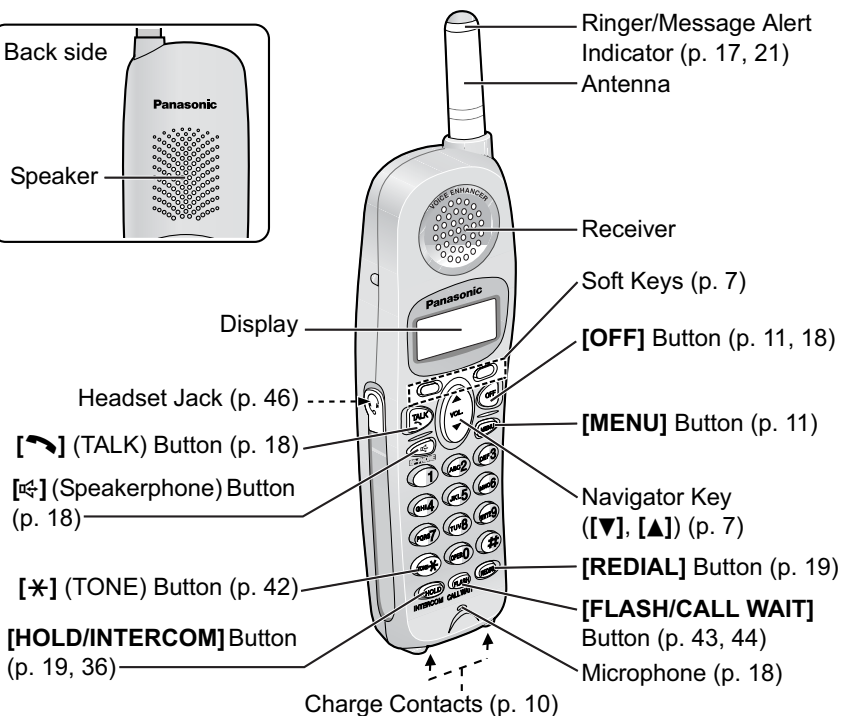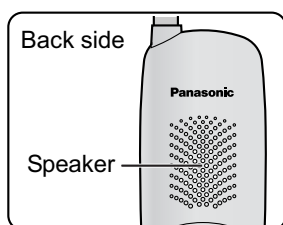


This unit includes two handsets and one base unit. **The included handsets are pre-registered at the factory and assigned the extension numbers 1 and 2.**

Charger unit

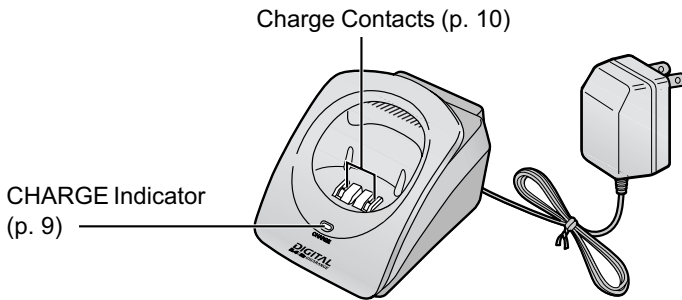

Handset soft keys



Pressing the left soft key selects Voice Enhancer "↓ (VE)".



Pressing the right soft key selects mute "Mute↓".

Two soft keys are used to select functions displayed directly above each key. Functions displayed above the keys will change depending on the state of use.

On this sample display, "↓ (VE)" and "Mute↓" are displayed above soft keys.

- When a function name does not appear above a soft key, the soft key has no function.

Handset navigator key



Scrolls up [▲] and down [▼] the function menu, the Caller List and the phone book.

Increases [▲] or decreases [▼] the handset ringer and receiver/speaker volumes.


Throughout these Operating Instructions:

- The soft keys are indicated by what is displayed above the keys.
Ex. "Press **Mute**." indicates "Press the soft key below **Mute↓**".
- The navigator key is indicated by the arrows [▼] or [▲].

Installation


Connections

Base unit

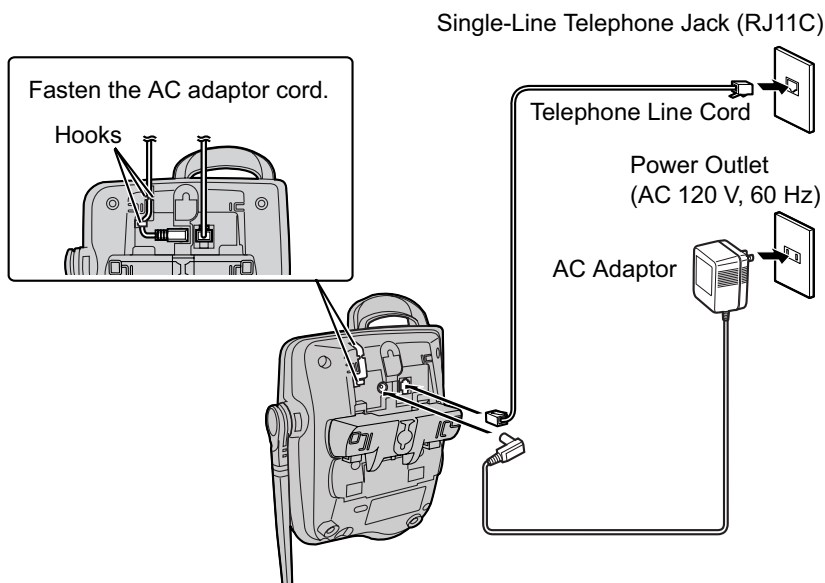

- Base unit: **USE ONLY WITH** Panasonic AC ADAPTOR PQLV1 (Order No. PQLV1Z).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- If your unit is connected to a PBX which does not support Caller ID and voice mail services, you cannot access those services.
- The unit will not work during a power failure. We recommend connecting a standard telephone to the same telephone line or to the same telephone jack using the Panasonic KX-J66 T-adaptor.


Charger unit

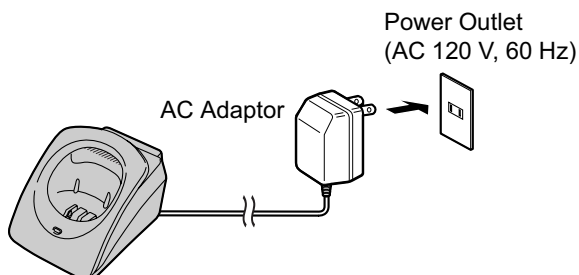

- Charger unit: **USE ONLY WITH** Panasonic AC ADAPTOR KX-TCA1 (Order No. KX-TCA1-G).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)


Installing the Battery in the Handset

Insert the battery (①), and press it down until it snaps into the compartment (②). Close the cover.

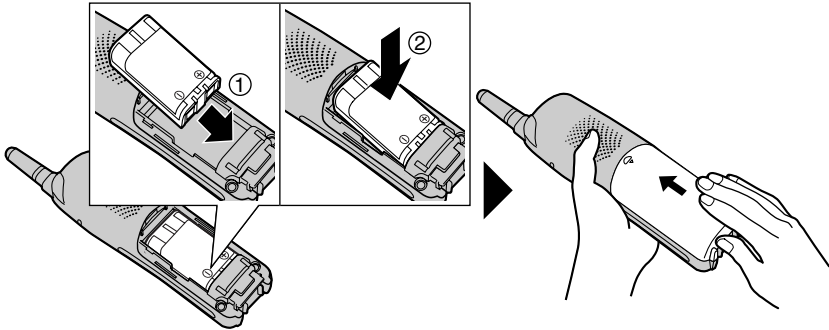

To replace the battery:


Press the notch on the cover firmly and slide it as indicated by the arrow. Replace the old battery with a new one (p. 10). Close the cover and charge the battery for 6 hours.

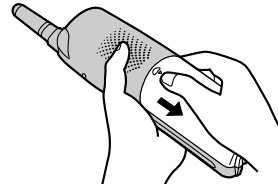

Battery Charge

Place the handsets on the base unit and charger. Charge for **6 hours** before initial use.

- The unit beeps once, the CHARGE indicator lights, and "Charging" is displayed.
- When the battery is fully charged, "Charge completed" is displayed.

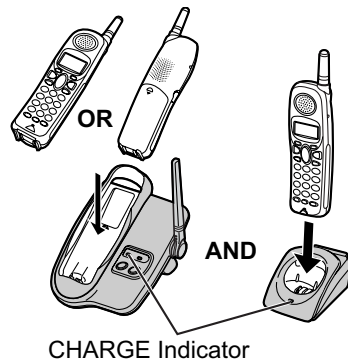

Battery strength

You can confirm battery strength on the handset display. Battery strength is indicated by the icons shown in the chart to the right.


Display prompt	Battery strength
	Fully charged
	Medium
	Low
(flashing)	Needs to be recharged.
	Discharged

Installation

Recharge

Recharge the battery when:

- “Recharge battery” is displayed on the handset,
- “” flashes, or
- the handset beeps intermittently while it is in use.



- The display will continually indicate “Recharge battery” and/or “” will flash when the handset battery is charged for less than 15 minutes and the handset is lifted off the base unit or charger.
- If the battery has been discharged, the handset will display “Charge for 6h” and “” when you place the handset on the base unit or charger. The handset will not work unless the battery is charged. Continue charging.

Battery replacement:

If you cleaned the charge contacts and fully charged the battery, but after a few telephone calls, “Recharge battery” is displayed and/or “” continues to flash, or “Charge for 6h” and “” are displayed, the battery may need to be replaced. Please order a new Panasonic HHR-P104 battery at the telephone number shown on page 2. To replace the battery, see page 9.

A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.



Battery information

After your Panasonic battery is fully charged, you can expect the following performance:

Operation	Operating time
While in use (TALK)	Up to 5 hours
While not in use (Standby)	Up to 11 days

- A fully charged battery will give you up to 5 hours of continuous talk time, or keep your handset in Standby mode to receive incoming calls for up to 11 days (if no phone calls are made). Battery power is consumed whenever the handset is off of the base unit or charger, even when the handset is not in use. The longer you leave the handset off of the base unit or charger, the time you can actually talk on the handset will be shortened. Actual battery performance depends on a combination of how often the handset is in TALK mode and how often it is in Standby mode.
- If the battery is fully charged, you do not have to place the handset on the base unit or charger until “Recharge battery” is displayed and/or “” flashes. This will maximize the battery life.
- If you want to keep the battery fully charged at all times, place the handset on the base unit or charger when the handset is not used. The battery cannot be overcharged.
- **Clean the charge contacts of the handset, the base unit and the charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.


Programmable Settings

Programming Guidelines **Handset**

This unit has several programmable functions which can be selected from the function menu on the display (p. 12).

The soft keys selects the functions displayed above each soft key.

When “▼” or “▲” is displayed, navigator key scrolls through the menu.

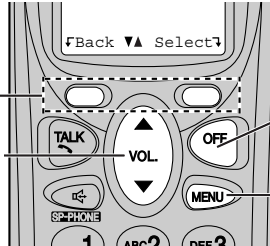

[OFF] exits programming.

[MENU] enters the function menu.

How to select a function item from the menu

Make sure the handset and base unit are not being used. The handset must be operated near the base unit and while off the base unit or charger.

1 Press **[MENU]**.

- The main menu is displayed (p. 12).

2 Scroll to the desired item by pressing **[▼]** or **[▲]**.



3 Press **Select** to select the desired item.



4 If the item has a sub-menu, select the menu item (p. 12). Repeat steps 2 and 3 until the desired item is displayed. If the item has no sub-menu, go to step 5.

5 Select the desired setting by pressing **[▼]** or **[▲]**, then press **Save** to save your setting.

- A confirmation tone will be heard and the setting will be saved.



6 Press **[OFF]** to exit programming mode.


- To go back to the previous menu, press **Back**, or press **Select** while “--- (Go back) ---” is displayed. If you press this key in the main menu, the unit will exit programming mode.
- After programming is complete, the display will return to the main menu or the sub-menu depending on which menu the selected item is located. (See the menu table on page 12.)
- You can exit programming mode at any time by pressing **[OFF]**.
- If you do not press any buttons for 60 seconds, the handset will exit programming mode.
- If the unit detects a problem, an error message will be displayed (p. 50–51) and/or error beeps will sound.

Programmable Settings

Function Menu Table **Handset**

You can use the following functions to customize your unit. See the corresponding pages for function details.

- After pressing **[MENU]**, you can also program menu items directly by pressing **([0]** to **[9]**, and **[H])** instead of using the soft keys (p. 49).

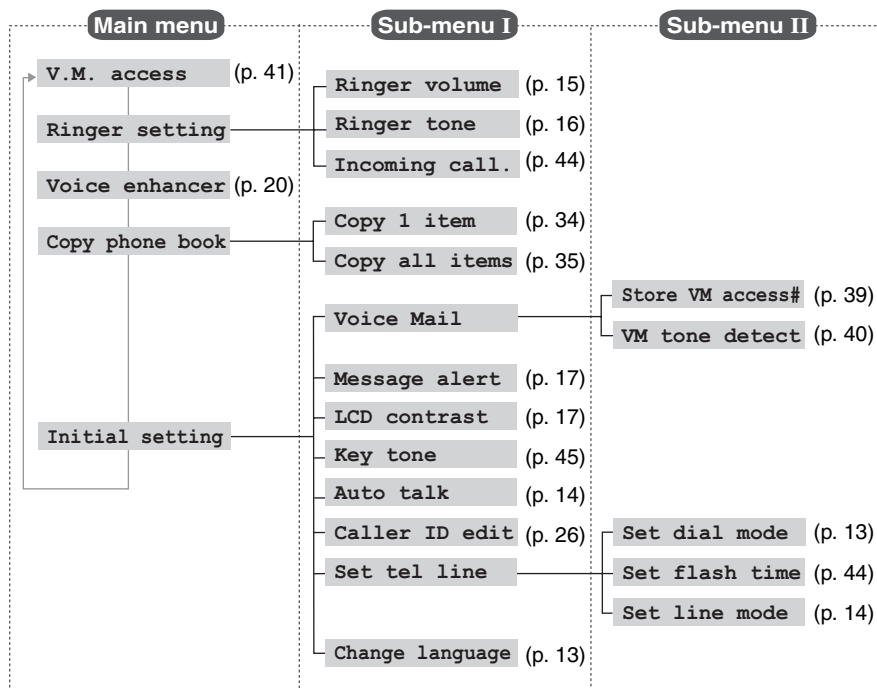

- If you program the Voice Mail (VM) access number, Voice Mail (VM) tone detection, dialing mode, flash time or line mode using one of the handsets, you will not need to program the same item using another handset.

Programmable Settings

Display Language **Handset**

You can select either “English” or “Spanish” as the display language. The factory preset is “English”.

1 Press **[MENU]**.

2 Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
⏮Back ⏮▲ Select⏮

3 Scroll to “Change language” by pressing **[▼]** or **[▲]**, then press **Select**.

Change language
⏮Back ⏮▲ Select⏮

4 To change from English to Spanish, press **Español**.

To change from Spanish to English, press **English**.

- The display changes to the selected language.
- You can also select a language by pressing **[▼]** or **[▲]**.

Display
:English
⏮Español Save⏮

5 When Spanish is selected, press **Salvar**, then press **[OFF]**.
When English is selected, press **Save**, then press **[OFF]**.

- If you select a language you cannot read, change the display language again using direct commands (p. 49).

Dialing Mode **Handset**

If you have touch tone service, set the dialing mode to “Tone”. For rotary or pulse service, set to “Pulse”. The factory preset is “Tone”.

1 Press **[MENU]**.

2 Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
⏮Back ⏮▲ Select⏮

3 Scroll to “Set tel line” by pressing **[▼]** or **[▲]**, then press **Select**.

Set tel line
⏮Back ⏮▲ Select⏮

4 Press **Select** at “Set dial mode”.

Set dial mode
⏮Back ⏮▲ Select⏮

5 Select “Pulse” or “Tone” by pressing **[▼]** or **[▲]**.

Set dial mode
:Tone
⏮Back ⏮▲ Save⏮

6 Press **Save**, then press **[OFF]**.

Programmable Settings

Line Mode **Handset**

The line mode is preset to “B” and generally should not be adjusted. If “Line in use” on the handset is not displayed properly or the IN USE indicator on the base unit does not light properly, the line mode selection is incorrect. Set line mode to “A”.

1 Press **[MENU]**.

2 Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
⏮Back ▼▲ Select⏭

3 Scroll to “Set tel line” by pressing **[▼]** or **[▲]**, then press **Select**.

Set tel line
⏮Back ▼▲ Select⏭

4 Scroll to “Set line mode” by pressing **[▼]** or **[▲]**, then press **Select**.

Set line mode
⏮Back ▼▲ Select⏭

5 Select “A” or “B” by pressing **[▼]** or **[▲]**.

Set line mode
:B
⏮Back ▼▲ Save⏭

6 Press **Save**, then press **[OFF]**.

Auto Talk **Handset**

The Auto Talk feature allows you to answer calls by simply lifting the handset off the base unit or charger. You do not need to press **[📞]** or **[📞]**. The factory preset is OFF.

1 Press **[MENU]**.

2 Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
⏮Back ▼▲ Select⏭

3 Scroll to “Auto talk” by pressing **[▼]** or **[▲]**, then press **Select**.

Auto talk
⏮Back ▼▲ Select⏭

4 Select “On” or “Off” by pressing **[▼]** or **[▲]**.

Auto talk
:Off
⏮Back ▼▲ Save⏭

5 Press **Save**, then press **[OFF]**.

- In order to view Caller ID information after you lift the handset to answer a call, leave the Auto Talk feature turned off.

Ringer Volume **Handset**

You can select the handset ringer volume to high, medium, low, or off. The factory preset is HIGH. If the handset ringer is turned off, the handset will ring at the low level for intercom calls, and will not ring for outside calls.

1 Press **[MENU]**.

2 Scroll to “Ringer setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Ringer setting
↓Back ▼▲ Select↓

3 Press **Select** at “Ringer volume”.

Ringer volume
↓Back ▼▲ Select↓

4 Select the desired volume level by pressing **[▼]** or **[▲]**.

- The volume will change and ring.
- The number of steps indicates the volume level.
- **To turn the ringer off**, press **[▼]** repeatedly until “Off ?” is displayed.

Ex. High

Ringer volume
Low ■■■■■ High
↓Back ▼▲ Save↓

5 Press **Save**.

- If the handset ringer is turned off, “Ringer off” will be displayed while not in use. If the handset is off the base unit or charger when there are missed calls or new messages in your voice mailbox (p. 41), “Ringer off” is not displayed.
- You can adjust the ringer volume while an outside call is ringing. Press **[▼]** or **[▲]** while the handset is ringing.

Temporary ringer off

While the handset is ringing for an outside call, you can turn the ringer off temporarily by pressing **[OFF]**. The handset will ring again as normal the next time a call is received.

Programmable Settings

Ringer Tone **Handset**

You can set the handset ringer to use one of 7 ringer patterns for outside calls. “Tone 1” to “Tone 3” are bell ringer patterns. “Melody 1” to “Melody 4” are melody patterns. The factory preset is “Tone 1”.

- You cannot change the ringer tone for intercom calls.
- If you subscribe to a Distinctive Ring Service (such as IDENT-A-RING) from your telephone company with 2 or 3 consecutive rings, select a bell ringer pattern (Tone 1 to 3). If you select a melody pattern, you will not be able to distinguish lines by their ringers.
- If you select one of the melody ringer patterns, the ringer will continue to sound for several seconds if:
 - the caller hangs up before you answer the call, or
 - another person answers the call using another phone connected on the same line.

1 Press **[MENU]**.

2 Scroll to “Ringer setting” by pressing **[▼]** or **[▲]**, then press **Select**.

Ringer setting
↓Back ▼▲ Select↓

3 Scroll to “Ringer tone” by pressing **[▼]** or **[▲]**, then press **Select**.

Ringer tone
↓Back ▼▲ Select↓

4 Select the desired ringer tone by pressing **[▼]** or **[▲]**.

- The handset will ring and the ringer tone will change. If the ringer volume has been turned off, the handset will not ring (p. 15).
- You can also select the ringer tone by pressing **[1]** to **[7]**.

Ringer tone
1:Tone 1
↓Back ▼▲ Save↓

5 Press **Save**, then press **[OFF]**.

Programmable Settings

LCD Contrast **Handset**

There are 6 levels of LCD contrast. The factory preset is "level 3".

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
↓Back ▼▲ Select↓

3 Scroll to "LCD contrast" by pressing **[▼]** or **[▲]**, then press **Select**.

LCD contrast
↓Back ▼▲ Select↓

4 Select the desired contrast by pressing **[▼]** or **[▲]**.

- The contrast will change.

Ex. Level 3
LCD contrast
Low ■■■ High
↓Back ▼▲ Save↓

5 Press **Save**, then press **[OFF]**.

Message Alert **Handset**

You can select whether or not the Ringer/Message Alert indicator on the handset will flash slowly when new messages in your voice mailbox have been recorded (p. 41). The factory preset is OFF.

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
↓Back ▼▲ Select↓

3 Scroll to "Message alert" by pressing **[▼]** or **[▲]**, then press **Select**.

Message alert
↓Back ▼▲ Select↓

4 Select "On" or "Off" by pressing **[▼]** or **[▲]**.

Message alert
:Off
↓Back ▼▲ Save↓

5 Press **Save**, then press **[OFF]**.

- The Ringer/Message Alert indicator will not flash for new messages while the handset is in use.
- The Ringer/Message Alert indicator acts both as a ringer indicator and as a message alert indicator. This indicator will flash rapidly when a call is received whether this feature is on or off.
- Battery operating time may be shortened when using this feature (p. 10).

Making Calls


1 Press [📞].

- “Talk” is displayed.

2 Dial a phone number.

- The dialed number is displayed.
- After a few seconds, the display will show the length of the call.

3 To hang up, press [OFF] or place the handset on the base unit or charger.

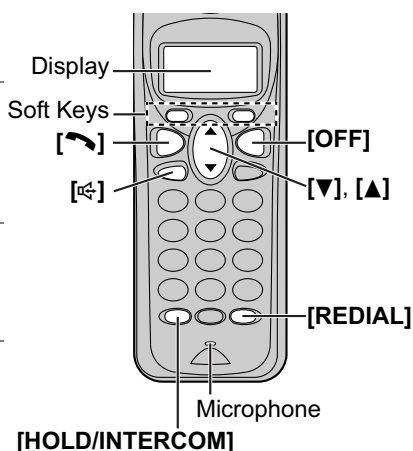

To have a hands-free phone conversation

1 Press [📞].

- “SP-phone” is displayed.

2 Dial a phone number.

- The dialed number is displayed.
- After a few seconds, the display will show the length of the call.

3 When the other party answers, talk into the microphone.

4 To hang up, press [OFF] or place the handset on the base unit or charger.


Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If you or the other party has difficulty hearing, press [▼] to decrease the speaker volume.
- While talking using [📞], you can switch to a hands-free phone conversation by pressing [📞]. To switch back to the receiver, press [📞].

To dial after confirming the entered number

- 1 Enter a phone number.



- If you misdial, press **Clear**. Enter the correct number.
- If a pause is required when dialing, press **Pause** where needed (p. 43).
- To cancel, press **[OFF]**.

- 2 Press **[↶]** or **[↷]**.

- 3 To hang up, press **[OFF]** or place the handset on the base unit or charger.

To adjust the receiver/speaker volume during a conversation

There are 3 volume levels for the receiver and 6 volume levels for the speaker.

To increase volume, press **[▲]**.

To decrease volume, press **[▼]**.

Ex. Receiver volume: High

Speaker volume: Level 6



- The display shows the current volume setting.
- If you try to increase/decrease volume when it is at the maximum/minimum level, the handset will beep 3 times.


To redial the last number dialed

Press **[↶]** or **[↷]**, then press **[REDIAL]**.

To redial using the redial list (Memory Redial)

The last 5 phone numbers dialed are stored in the redial list.

- 1 Press **[REDIAL]**.



- The last number dialed is displayed.

- 2 Scroll to the desired number by pressing **[▼]** or **[▲]**.

- You can also scroll down through the list by pressing **[REDIAL]**.
- To exit the list, press **[OFF]**.

- 3 Press **[↶]** or **[↷]**.

- **To erase an item**, scroll to the item then press **Erase**.
- If "No items stored" is displayed, the list is empty.

To put a call on hold

- 1 Press **[HOLD/INTERCOM]** during a conversation.

- "Line on hold." is displayed.
- To transfer the call to another handset, see page 37.

- 2 Press **[HOLD/INTERCOM]** again.

- "Hold" is displayed.

To return to the call, press **[↶]** or **[↷]**.

- Another handset user can also take the call by pressing **[↶]** or **[↷]**.
- If another phone is connected on the same line (p. 8), you can also take the call by lifting its handset.
- If a call is kept on hold for 6 minutes, an alarm tone will start to sound and the Ringer/Message Alert indicator will start to flash rapidly. After 4 additional minutes on hold, the call will be disconnected.

Making Calls

Voice Enhancer Technology


Panasonic's Voice Enhancer Technology clarifies the voice of the person you are talking to, reproducing a more natural-sounding voice that is easier to hear and understand.

Voice Enhancer Technology can be turned on or off. The factory preset is OFF.

- Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off.

To turn this feature on, press **(VE)** during a conversation.

- “**(VE)**” is displayed.
- **To turn this feature off**, press **(VE)** again.
“**(VE)**” disappears from the display.
- After hanging up a call, the on/off setting will be retained.



- If you store a voice mail access number (p. 39), “VM” will be displayed instead of “(VE)” for 15 seconds after pressing **[]** or **[]**.

When the handset is not in use, you can also turn this feature on or off by programming as follows:

1. Press **[MENU]**.
2. Scroll to “Voice enhancer” by pressing **[▼]** or **[▲]**, then press **Select**.
3. Select “On” or “Off” by pressing **[▼]** or **[▲]**.
4. Press **Save**, then press **[OFF]**.

Backlit LCD display/Lighted handset keypad


The handset display and dialing buttons will light for a few seconds after pressing a button or lifting the handset off the base unit or charger.

Answering Calls

When a call is received, the unit rings, "Incoming call" is displayed, and the Ringer/Message Alert indicator on the handset and the IN USE indicator on the base unit flash rapidly. If you subscribe to Caller ID, see page 22.

- 1 Press [] or [].
 - You can also answer a call by pressing any button except [, [] or [OFF].
- 2 To hang up, press [OFF] or place the handset on the base unit or charger.

Ringer/Message Alert Indicator

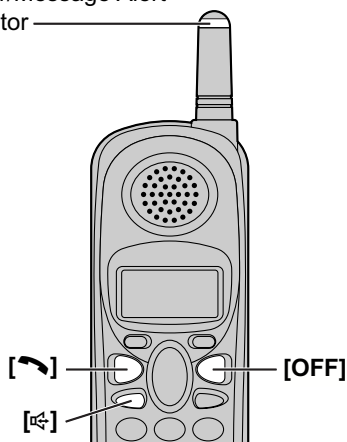

Auto Talk

If the Auto Talk feature is turned on (p. 14), you can answer a call by simply lifting the handset off the base unit or charger.

Temporary ringer off

You can turn the ringer off temporarily by pressing [OFF], while the handset is ringing for an outside call. The handset will ring again as normal the next time a call is received.

- To transfer the call to another person, see page 37.
- If the ringer volume is turned off, the unit will not ring (p. 15).

Caller ID Service

This unit is compatible with Caller ID services offered by your telephone company. If you subscribe to Caller ID, caller names and phone numbers will be displayed and recorded in the Caller List.

How Caller ID information is displayed

When a call comes in, the unit will ring and Caller ID information will be received. The display will show the caller's information.*

Example

ROBINSON, TINA
1-555-222-3333

- After you answer the call, the display will show the length of the call.

*Personalized Name Display

If you receive a call from one of the same phone numbers stored in the phone book, the handset will show the caller's name stored in the phone book instead of incoming caller's name.

- If the unit does not receive Caller ID information, one of the following will be displayed:

Display	Meaning
Out of area	The caller dialed from an area which does not provide Caller ID service.
Private caller	The caller requested not to send his/her information.
Long distance	The caller made a long distance call.

- Depending on the radio communications with the base unit, the handset may not display Caller ID information immediately after the first ring.
- If your unit is connected to a PBX which does not support Caller ID, you cannot access Caller ID service.
- Name display service may not be available in some areas. For further information, please contact your telephone company.
- If you subscribe to both Caller ID and Call Waiting with Caller ID services (CWID), when a second call is received while talking, a call waiting tone will be heard and the second caller's information will be displayed on the handset in use (p. 43). Contact your telephone company for details about availability in your area, and to verify that CWID service is activated on your telephone line.

Using the Caller List

The unit can record information up to 30 different callers and store this information in the Caller List. Caller information is sorted by the most recent call to the oldest. When the 31st call is received, the information from the 1st call is deleted.

The unit will also tell you how many calls you missed while you were out or unavailable to answer the phone.

Handset on the base unit or charger

2 missed calls [1]
Charging

① The display will show the number of calls you missed.

Handset off the base unit or charger

2 missed calls
Rcvd Phone
↓calls book ↓

② Press **Rcvd calls** to review other calls logged in the Caller List.

- If there are no items in the Caller List, "Rcvd calls" will not be displayed.
- After viewing the missed call entries, "missed calls" will disappear from the display.

- When your voice mailbox has received message(s), "Voice Mail" will be displayed in place of missed calls display (p. 41).

Viewing the Caller List **Handset**

1 Press **Rcvd calls**, [▼], or [▲] to enter the Caller List.

Ex. 2 calls missed.

2 missed calls
Rcvd Phone
↓calls book ↓

2 missed calls
▼▲=Scroll list
↓All erase

2 To search from the most recent call, press [▼].
To search from the oldest call, press [▲].

- The caller's name, number and the time and date of the call are displayed. Name and phone number are alternately displayed as shown on the right.

Example

SMITH, JACK
3:10P JUN.29
↓Erase Select↓

↑↓
1-555-333-4444
3:10P JUN.29
↓Erase Select↓

3 Press [OFF] to exit the list.

- If there is no name information for a caller and you do not store the name and phone number in the phone book, the display will only show the phone number.
- Each handset has its own Caller List. If you viewed the Caller List or answered a call on one handset, the same information in the other handset will be displayed as "missed".
- If you do not press any buttons for 60 seconds, the unit will exit the Caller List.

Using the Caller List

What “✓” means

“✓” indicates you have already viewed this calling information or answered the call. If the same caller calls again, the call entry with the “✓” will be replaced with the new call entry.

SMITH, JACK 3:10P JUN.29 ✓

If a caller calls more than once

The number of times the same caller called is displayed (“×2” to “×9”). The date and time of the most recent call will be recorded. After viewing a caller’s information, “×2” to “×9” will be replaced with “✓”.

Ex. Called 2 times.

TURNER, CINDY 11:20A JUN.12 ×2

Calling Back from the Caller List **Handset**

1 Press **Rcvd calls**, **[▼]**, or **[▲]** to enter the Caller List.

2 Scroll to the desired caller by pressing **[▼]** or **[▲]**.

3 Press **[↶]** or **[📞]**.

- The phone number is dialed.
-

- In some cases, you may have to edit the number before dialing (p. 25). (Ex. You may have to delete “1” and the area code.)
- If a phone number is not displayed in the caller information, you cannot call that caller back from the Caller List.

Editing the Caller's Phone Number **Handset**

You can edit a phone number in the Caller List by removing its area code and/or the long distance code "1".

Once you call back an edited number, this unit can automatically edit incoming phone numbers from the same area code in the Caller List and each time you receive a call (**Caller ID Number Auto Edit**, page 26).

1 Press **Rcvd calls**, [**▼**], or [**▲**] to enter the Caller List.

2 Scroll to the desired caller by pressing [**▼**] or [**▲**].

PARKER, FRED
11:20A JAN.12
↓Erase Select↓

↑↓

1-555-321-5555
11:20A JAN.12
↓Erase Select↓

3 Press **Select**.

4 Press **Edit** repeatedly until the number is shown in the desired format.

- Each time you press **Edit**, the number is rearranged into one of 3 patterns.

- (a) Phone no.
- (b) Area code — Phone no.
- (c) 1—Area code — Phone no.

- The order in which patterns (a)–(c) are displayed depends on how the telephone number is displayed in step 2.

(a) 321-5555
↓Edit Save↓

↓

(b) 555-321-5555
↓Edit Save↓

↓

(c) 1-555-321-5555
↓Edit Save↓

5 To call the edited number, press [**↶**] or [**☎**].

- If Caller ID Number Auto Edit is turned on (factory preset is on), phone numbers with the same area code as the number you edited will now be edited in the Caller List and each time you receive a call.
- You can press [**OFF**] immediately after pressing [**↶**] or [**☎**] if you wish to activate the Auto Edit feature without actually dialing the number you just edited.

To save the edited number into the phone book, press **Save.**

- If there is no name information, see "Storing Caller Information in the Phone Book" on page 27, from step 4.
- Even if the Auto Edit feature is turned on, this feature will not be activated by saving the edited number in the phone book.

- If you receive a call from a 7-digit phone number stored in the phone book, "Edit" will not be displayed in step 4.

Using the Caller List

Caller ID Number Auto Edit **Handset**

Once you call back an edited number (p. 25), this unit can automatically edit incoming phone numbers from the same area code in the Caller List and each time you receive a call. For example, it can ignore the area code of calls originating from your area code, so that you can call these numbers from the Caller List without dialing the area code.

To activate this feature, you must edit a caller's phone number in the Caller List (p. 25) by selecting pattern ③, ⑥, or ⑦, then make a call to that number. Calls from numbers in that area code will be edited automatically. The unit can remember up to 4 area codes to be edited according to patterns ③ and ⑥.

When more than 5 area codes are edited, older area codes are reset to pattern ⑦. Phone numbers from the 4 most recently edited area codes will be automatically edited.

You can turn this feature on or off using the handset. The factory preset is ON.

To turn Caller ID Number Auto Edit on or off

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
↓Back ▼▲ Select↓

3 Scroll to "Caller ID edit" by pressing **[▼]** or **[▲]**, then press **Select**.

Caller ID edit
↓Back ▼▲ Select↓

4 Select "Off" or "On" by pressing **[▼]** or **[▲]**.

Auto edit
:On
↓Back ▼▲ Save↓

5 Press **Save**, then press **[OFF]**.

- If you fail to reach your destination when making a call, the phone number you dialed might have an incorrect pattern. Edit the phone number with another pattern (p. 25).
- When this feature is turned off, the unit will still be able to display Caller ID, but incoming Caller ID numbers will not be automatically edited.
- If you move to another area, you may need to turn this feature off to erase the previously edited area codes. To use this feature again, turn it on and reprogram the area codes you want to edit once again.

Storing Caller Information in the Phone Book

Handset

Caller names and phone numbers that are in the Caller List can be stored in each handset's phone book.

- 1 Press **Rcvd calls**, [▼], or [▲] to enter the Caller List.

2 missed calls
Rcvd Phone
↓calls book ↓

2 missed calls
▼▲=Scroll list
↓All erase

- 2 Scroll to the desired caller by pressing [▼] or [▲].

TURNER, CINDY
11:00A JUN.12 x3
↓Erase Select ↓

↑↓
1-555-456-7890
11:00A JUN.12 x3
↓Erase Select ↓

- 3 Press **Select**.

- If the number requires editing, see page 25.

- 4 Press **Save**.

TURNER, CINDY
1-555-456-7890
↓Edit Save ↓

- If there is no name information for the caller, "Enter name" will be displayed.

— You can enter a name by performing the following steps:

- (1) enter the name (p. 30),
- (2) press [▼], and
- (3) press **Save**.

— If a name is not required, press [▼], then press **Save**.

- To continue storing other items, repeat from step 2.
- To exit programming mode, press [OFF].

Enter name
[]
▼=Next ▶↓

CINDY TURNER
◀▶ ▼=Next ▶↓

- You cannot store Caller List item in the phone book if a phone number is not displayed.

Using the Caller List

Erasing Caller Information Handset

To erase a specific caller

1 Press Rcvd calls , [▼], or [▲] to enter the Caller List.	2 missed calls Rcvd Phone ↵calls book ↵ 2 missed calls ▼▲=Scroll list ↵All erase
2 Scroll to the desired caller by pressing [▼] or [▲], then press Erase . • To erase other items, repeat step 2. • To exit the Caller List, press [OFF].	REAGAN, TOM 12:20A JUN.12 ↵Erase Select↵ Erased

To erase all entries

Before erasing all entries, make sure that you have viewed all missed calls.








1 Press Rcvd calls , [▼], or [▲] to enter the Caller List.	[1] Rcvd Phone ↵calls book ↵
2 Press All erase .	0 missed call ▼▲=Scroll list ↵All erase
3 Press Yes . • All entries in your Caller List are erased.	All erase? ↵No Yes↵ All erased

- To cancel erasing, press **No** after step 2.

Phone Book

The handset can store up to 30 names and phone numbers in its phone book. You can make a call by selecting a name or number from the phone book, and copy phone book items from one handset to another (p. 34–35).

Storing Names and Numbers **Handset**

1 Press Phone book .	
2 Press Add . The display will show the number of stored items.	
3 Enter a name of up to 16 characters with the dialing buttons ([0] to [9]) (p. 30), then press [▼] . If a name is not required, press [▼] then go to step 4.	 
4 Enter a phone number of up to 32 digits. - Each time you press ◀, a digit is erased. To erase all of the digits, press and hold ◀. - If a pause is required when dialing, press P. A pause is stored in a phone number as one digit (p. 43).	 
5 Press [▼] . - If you want to change the name, press Edit. The display returns to step 3. Change the name. - If you want to change the number, press [▲]. The display returns to step 4. Change the number.	
6 Press Save . To continue storing other items, repeat from step 2.	
7 Press [OFF] . To store numbers for calling card access (see “Chain Dial” on page 32), we recommend you add pauses after each item. Storing pauses with numbers will prevent misdialing (p. 43). The delay time necessary will depend on your telephone company.	


Phone Book

Selecting characters to enter names

Enter names using the dialing buttons. Press each button until the desired character is displayed.

- Pressing each button selects a character in the order shown below.

Keys	Characters	Keys	Characters
[1]	# & ' () * , - . / 1	[6]	m n o M N O 6
[2]	a b c A B C 2	[7]	p q r s P Q R S 7
[3]	d e f D E F 3	[8]	t u v T U V 8
[4]	g h i G H I 4	[9]	w x y z W X Y Z 9
[5]	j k l J K L 5	[0]	0 Space
◀	Erases the character to the left.		
▶	Moves the cursor to the right. (To enter another character using the same number key, move the cursor to the next space.)		

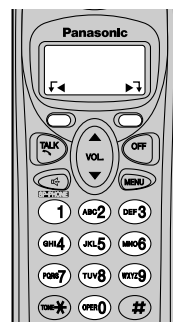

For example, to enter “Tom”:

1 Press [8] four times.

T

2 Press [6] three times, then press ▶ to move the cursor.

To

3 Press [6] once.

Tom

If you make a mistake when entering a name or number

Use ◀ to erase the incorrect character. Each time you press ◀, a character is erased. Re-enter the correct character. To erase all characters, press and hold ◀.

Dialing from the Phone Book **Handset**

1 Press **Phone book**.

2 Press **Search**.

Phone book
7 items
↓Add Search↓

3 Scroll to the desired item. To scroll down, press [▼]. To scroll up, press [▲].

0-9=Name search
▼▲=Scroll list

Phone book items are sorted in the following order:	
1	Alphabet letters (Alphabetical)
2	Space & ' () , - . /
3	Numbers 0 to 9
4	✿ *
5	Telephone numbers (If no name is stored)

4 Press [↵] or [⏏].

- The displayed phone number is dialed.

Frank
444-5555
↓Erase Edit↓

- If "No items stored" is displayed in step 1, the phone book is empty.
- To exit the phone book, press [OFF].
- To view a phone number over 16 digits long, repeat steps 1 to 3, then press **Edit** and then [▼]. When finished, press [OFF].
- To quickly search the desired item, press [▼] or [▲] after step 1.

To search for a name by initial

1. Press **Phone book**.

2. Press **Search**.

3. Press the dialing button for the first letter of the desired name until any name with the same initial is displayed (see the Index on page 32).

Ex. To find "Frank", press [3] repeatedly until the first item under "F" is displayed.

- If there are no items beginning with the character you selected, the first item in the next alphabetical index will be displayed.

4. Press [▼] repeatedly until the desired name is displayed.

Phone Book

Index table

Keys	Index	Keys	Index
[1]	Symbols, 1	[6]	M, N, O, 6
[2]	A, B, C, 2	[7]	P, Q, R, S, 7
[3]	D, E, F, 3	[8]	T, U, V, 8
[4]	G, H, I, 4	[9]	W, X, Y, Z, 9
[5]	J, K, L, 5	[0]	0, Space

Chain Dial **Handset**

You can dial a combination of phone book or manual key pad entries while making a call. This feature can be used, for example, to first automatically dial a calling card access number that you have stored in the phone book, then manually or automatically dial your PIN and then automatically dial the destination number from the phone book.

Ex. Using a long distance calling card

- To prevent misdialing, we recommend you add pauses where needed when storing numbers. For example, add pauses after a calling card access number and your PIN when storing in the phone book (p. 29).
1. Search and dial from phone book: 1-800-012-3456 (Calling card access number)
 - The voice guidance may be announced.
 2. Search and dial from phone book: 1234 (Calling card PIN)
 3. Search and dial from phone book: 1-555-012-3456 (Destination number)

1 While you are on a call;

Press **[MENU]**.

2 Search for the desired item by pressing **[▼]** or **[▲]**.

- To search for an item by initial, see page 31.

Phone book
▼▲=Scroll list
↵Back Search↵

3 Press **Call**.

- The phone number is dialed.
- If required, repeat steps 1 to 3 for any remaining numbers.

Alan
1-555-012-3456
↵Back **Call**↵

- If you have rotary or pulse service, you need to press **[✳]** before pressing **[MENU]** in step 1 to change the dialing mode temporarily to tone.

Editing an Item in the Phone Book **Handset**

1 Press **Phone book**.

2 Press **Search**.

3 Scroll to the desired item by pressing [**▼**] or [**▲**], then press **Edit**.

- To search for the item by initial, see page 31.

Jane
345-6789
↓Erase Edit↓

4 Edit the name (p. 30), then press [**▼**].

- If you do not need to change the name, press [**▼**] then go to step 5.

Jane Walker
← ▼=Next →

5 Edit the phone number, then press [**▼**].

- If you do not need to change the number, press [**▼**] then go to step 6.
- Each time you press ◀, a digit is erased. To erase all of the digits, press and hold ◀.

5553456789
← ▼=Next P↓

6 Press **Save**.

- To continue editing other items, repeat from step 3.

7 Press [**OFF**].

Erasing an Item in the Phone Book **Handset**

1 Press **Phone book**.

2 Press **Search**.

3 Scroll to the desired item by pressing [**▼**] or [**▲**], then press **Erase**.

- To search for the item by initial, see page 31.

Helen
555-777-8888
↓Erase Edit↓

4 Press **Yes**.

- To erase other items, repeat from step 3.

Erase?
↓No Yes↓

5 Press [**OFF**].

- To cancel erasing, press **No** after step 3.

Phone Book

Copying Items in the Phone Book **Handset**

You can copy one or all phone book items between two handsets. The destination handset will save the entries in its phone book.

- If an outside call is received during the phone book copy, copying will stop. You will need to re-send the item(s) later.
- After the copy has started, do not place your handset on the base unit or charger until copying finishes, otherwise copying will stop.

To copy one phone book item to another handset

Make sure the destination handset is not in use.

1 Press **[MENU]**.

2 Scroll to “Copy phone book” by pressing **[▼]** or **[▲]**, then press **Select**.

Copy phone book
↵Back ▼▲ Select↵

3 Press **Select** at “Copy 1 item”.

Copy 1 item
↵Back ▼▲ Select↵

4 Scroll to the desired phone book item by pressing **[▼]** or **[▲]**, then press **Send**.

- To search for the item by initial, see page 31.
- You can continue by copying to other items.
- The destination handset displays “Phone book Receiving” then “Phone book Received”.

Jane
345-6789
↵Back ▼▲ Send↵

Complete

5 Press **[OFF]**.

To copy all of the items in your phone book to another handset

Make sure the destination handset is not in use.

1 Press **[MENU]**.

2 Scroll to "Copy phone book" by pressing **[▼]** or **[▲]**, then press **Select**.

Copy phone book
↓Back ▼▲ Select↓

3 Scroll to "Copy all items" by pressing **[▼]** or **[▲]**, then press **Select**.

- When all items have been copied, "Complete" is displayed.
- The destination handset displays "Phone book Receiving" then "Phone book Received".

Copy all items
↓Back ▼▲ Select↓

Ex. Copying 1st item out of
10 items

Tom Jones
555-765-4321
01/10

4 Press **[OFF]**.

- You can exit phone book copying mode by pressing **[OFF]**.

Intercom

Intercom calls can be made between two handsets.
The handsets have the extension number 1 and 2 which has “[1]” and “[2]” on the display.

- If the handset is off the base unit or charger when there are missed calls or new messages in your voice mailbox, the handset’s extension number “[1]” or “[2]” is not displayed. To confirm the extension number, either place the handset on the base unit or charger, or view the missed calls (p. 23) and listen to the new messages (p. 41).

Paging between Handsets **Handset**

Ex. From the Handset 1 to the Handset 2

1 Handset 1: Press [HOLD/INTERCOM] . • The paged handset will ring for 1 minute and the Ringer/Message Alert indicator flashes rapidly. • To stop paging, press [OFF].	Calling HS[2]
2 Handset 2: Press [↶] , [↷] or [HOLD/INTERCOM] to answer the page. • Any button except [▼], [▲] or [OFF] can be pressed to answer the page.	Call from HS[1]
3 Handset 1: When the paged party answers, start talking.	Intercom 00-00-05 Mute↴
4 Handset 1 or Handset 2: To disconnect the intercom, press [OFF] .	

- If the Auto Talk feature is turned on (p. 14), you can also answer a page by simply lifting the handset off the base unit or charger.

During an intercom call:

- You can switch to the speaker by pressing **[↷]**. To switch back to the receiver, press **[↶]**.
- If you have difficulty hearing while using the speakerphone on the handset, decrease the speaker volume by pressing **[▼]**.
- If an incoming call is being received, you will hear two tones (incoming call tone, page 44) and the IN USE indicator will flash rapidly on the base unit. To answer the call, press **[OFF]**, then **[↶]** or **[↷]**.

- When the ringer volume is turned off (p. 15), the handset will ring at the low level for intercom calls.
- You cannot change the ringer tone for intercom calls.

Transferring a Call

You can transfer an outside call to another handset.

From a **Handset** to another **Handset**

Ex. From the Handset 1 to the Handset 2

1 Handset 1:

- (1) During a call, press **[HOLD/INTERCOM]**.
 - The call is put on hold.
- (2) Press **Handset**.
 - If the paged party does not answer, press [] or [] to return to the outside call.
 - After the paged party answers, "Intercom hold" is displayed.

2 Handset 2:

- Press [], [] or **[HOLD/INTERCOM]** to answer the page.
- Any button except [], [] or **[OFF]** can be pressed to answer the page.

3 Handset 1:

You can announce the transfer.
To complete the transfer, press **[OFF]**.

- If the Auto Talk feature is turned on (p. 14), the paged handset user can also answer a page by simply lifting the handset off the base unit or charger.

Quick call transfer

You can transfer a call without waiting for the paged party to answer.

1 During a call, press **[HOLD/INTERCOM]**, then press **Handset**.

2 Press **[OFF]** to hang up.

- The call will be transferred directly.
 - The paged party can answer the transferred call by pressing [] or [].
 - After the paged party answers, the transfer is complete.
 - If the paged party does not answer, press [] or [] to return to the outside call.
-
- If the paged party does not answer within 60 seconds after you hang up, your phone will ring and the call will be returned to your phone. You may speak to the caller again by pressing [] or [].
If you do not answer the call within 4 minutes, the call will be disconnected.

Conference Calls

While you are talking with an outside caller, another handset user can join the conversation and establish a conference call.

Handset

1 During a call, press **[HOLD/INTERCOM]**.

- The call is put on hold.

2 Press **Handset**.

3 When the paged party answers, press **Conf** on your unit to make a conference call.

- “Conference” is displayed during a conference call.
-

- To leave the conference, press **[OFF]**. The two other parties can continue the conversation.
- During a conference, the outside call can be placed on hold by pressing **[HOLD/INTERCOM]**. Internal communications are not suspended. Only the person who placed the call on hold can resume the full conference by pressing **Conf**.

Call Share **Handset**

This feature allows the handset to join an existing outside call.

To join a conversation (Call Share)

Press [] or [].

- “Conference” is displayed.

Voice Mail Service

Voice mail is an automatic answering service offered by your telephone company. If you subscribe to this service, your telephone company's voice mail system can answer calls for you when you are unavailable to answer the phone or when your line is busy. Callers can leave messages that are saved in virtual voice mailboxes, which are maintained for you at the phone company, allowing you to listen to your messages whenever you like. The unit will let you know that someone has left voice mail for you (p. 41). Once you have stored your voice mail access number, you can access your voice mailbox simply by pressing **[MENU]** on the handset, then selecting **Select** at "V.M. access".

Storing a Voice Mail Access Number **Handset**

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press **Select**.

Initial setting
⏮ Back ⏭ Select ⏮

3 Press **Select** at "Voice Mail".

Voice Mail
⏮ Back ⏭ Select ⏮

4 Press **Select** at "Store VM access#".

Store VM access#
⏮ Back ⏭ Select ⏮

5 Enter your access number, up to 32 digits.

- If a pause is required for dialing, press **P**.*
- Each time you press **◀**, a digit is erased.
To erase all of the digits, press and hold **◀**.

Example

1234567PPP890 ■
⏮ ◀ MENU=Save P ⏭

6 Press **[MENU]** to save your setting, then press **[OFF]**.

*To prevent misdialing, you may add pauses between your voice mail access number and your mailbox password in step 5.

Ex. 1-222-333-4444 PPPP 8888

Your voice mail access number Pauses Your mailbox password

Pressing **P** once creates a 3.5 second delay and counts as one digit. The delay time necessary between entering your access number and entering your mailbox password will depend on your telephone company.

Advanced Operation

To erase a stored voice mail access number

Repeat steps 1 to 4, then press and hold **◀** until all of the digits are erased. Press **[MENU]**, then press **[OFF]**.

Voice Mail Service

Setting Voice Mail (VM) Tone Detection Handset

Your telephone company sends special signals (Voice mail tones) to the unit. Press [📞] or [📞] to listen to the dial tone. If you hear a series of dial tones followed by a continuous dial tone, this indicates that a new message was recorded. Voice Mail detection is preset at the factory to ON. Minutes after you hang up or after the phone stops ringing, your unit will seize the phone line and check if a message has been recorded. If a new message was recorded at your telephone company, "Voice Mail" will be displayed on the handset, and the Ringer/Message Alert indicator on the handset will flash slowly if Message Alert is turned on (p. 17).

Turn off this programming when:

- you do not subscribe to a voice mail service,
- your telephone company does not send a series of tones, followed by a continuous tone to indicate you have new voice mail, or
- your phone is connected to a business or office telephone system (PBX).

See below to turn this setting off.

If you are not sure which setting is required, consult your local telephone company or contact the Panasonic Customer Call Center.

1 Press [MENU].

2 Scroll to "Initial setting" by pressing [▼] or [▲], then press **Select**.

Initial setting
⏮Back ▼▲ Select⏭

3 Press **Select** at "Voice Mail".

Voice Mail
⏮Back ▼▲ Select⏭

4 Scroll to "VM tone detect" by pressing [▼] or [▲], then press **Select**.

VM tone detect
⏮Back ▼▲ Select⏭

5 Select "Off" or "On" by pressing [▼] or [▲].

VM tone detect
:On
⏮Back ▼▲ Save⏭

6 Press **Save**, then press [OFF].

Listening to Voice Mail Messages **Handset**

The unit will let you know that someone has left new voice mail for you:

- "Voice Mail" will be displayed on the handset, and
- the Ringer/Message Alert indicator on the handset will flash slowly if Message Alert is turned on (p. 17) and the handset is not in use.

Ex. Handset on the base unit or charger

Voice Mail	[1]
Charging	

Ex. Handset off the base unit or charger

Voice Mail	
Rcvd	Phone
calls	book

To listen to your voice mail message(s)

1 Press **[MENU]**.

2 Press **Select** at "V.M. access".

- The handset is connected to the telephone line and dials the access number (p. 39) in speakerphone mode.
- If the handset beeps 3 times and "Store VM access#" is displayed, a voice mail access number is not stored. To store the number, see page 39.

V.M. access
Back Select

↓

Dial VM access#
(VE) Mute

3 Follow the pre-recorded instructions.

4 When finished, press **[OFF]**.

- You can also listen to your voice mail message(s) by using [↶] or [↷].

1. Press [↶] or [↷].

2. Press **VM** within 15 seconds.

- After 15 seconds, "VM" will disappear and "(VE)" will be displayed.
- If a voice mail access number is not stored, "VM" will not be displayed. To store the number, see page 39.

Talk
00-00-08
VM Mute

3. Follow steps 3 and 4 of "To listen to your voice mail message(s)" above.

- If the handset still indicates you have new messages even after you have listened to them, turn the voice mail indicators off by pressing and holding **[OFF]** until the handset beeps. "Voice Mail" will disappear and the Ringer/Message Alert indicator will go out.
- If your voice mail service uses a voice mail tone and the recorded message is over 3 minutes long, "Voice Mail" may not be displayed and the Ringer/Message Alert indicator may not flash slowly.
- If your voice mail service uses a voice mail tone, the tone will be heard from any parallel connected phone. If you use another phone to retrieve messages, you have to dial your access number manually.

Special Features

Handset Locator **Base Unit**

You can locate the handset or page the handset user with beep tones from the base unit.

- 1** Press **HANDSET LOCATOR** [] or [] to page the handset.
 - The IN USE indicator flashes rapidly.
 - The paged handset beeps for 1 minute and displays “Call from Base”.
- 2** To stop paging,
Base unit:
Press **HANDSET LOCATOR** [] or [].
OR
Handset:
Press [**OFF**].
 - You can also stop paging by pressing any button except [**▼**] or [**▲**].

Temporary Tone Dialing (For Rotary or Pulse Service Users) **Handset**

Press [**✱**] (TONE) before entering access numbers which require tone dialing.


- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the dialing mode will return to pulse.

Muting Your Conversation **Handset**

During a call, you can mute your phone so the other party cannot listen to you. When muting your conversation, you can hear the other party.

Press **Mute**.

- “Mute” will flash.
- **To release the mute**, press **Mute** again.
- If you press [] or [] to switch between the receiver and speaker, the mute will be released.



For Call Waiting Service Users **Handset**

Press **[FLASH/CALL WAIT]** if you hear a call waiting tone during a conversation.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **[FLASH/CALL WAIT]** again.
- Call Waiting service cannot be used when the first call is put on hold.
- If this function does not operate properly, consult your telephone company for details.

Call Waiting Caller ID display

If you subscribe to both Caller ID and Call Waiting with Caller ID services (CWID), when a second call is received while talking, the second caller's information will be displayed. After you hear a call waiting tone while talking, the display shows the caller's name with the phone number and "----Waiting-----".

BROWN, NANCY 1-555-666-7777 ----Waiting-----
--

- Contact your telephone company for details about availability in your area, and to verify that CWID service is activated on your telephone line.
- The caller's information will only be shown on the display of the handset which is on the outside call.

Using the PAUSE Key

(For PBX Line/Long Distance Calls) **Handset**

We recommend you press **Pause** or **P** if a pause is required for dial with a PBX or to make a long distance call.

Ex. Line access number **[9]** (PBX)

[9] ➡ **Pause** or **P** ➡

Phone number

- Pressing **Pause** or **P** once creates a 3.5 second pause. This prevents misdialing when you dial after confirming the entered number (p. 19) or dial a stored number (p. 31, 32).
- Pressing **Pause** or **P** more than once increases the length of the pause between numbers.

Example

9P15556667777
↓Clear Pause↓

OR

9P15551234567
↓◀ ▼=Next P↓

Special Features

FLASH Button Handset

Pressing **[FLASH/CALL WAIT]** allows you to use special features of your host PBX such as transferring an extension call, or accessing optional telephone services such as call waiting.

- Pressing **[FLASH/CALL WAIT]** cancels Temporary Tone Dialing mode or the mute (p. 42).

Selecting the flash time

The flash time required depends on your telephone exchange or host PBX. You can select the following flash times: “700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)”. The factory preset is “700 ms”.

- If PBX functions do not work correctly, consult your PBX supplier for the correct settings.

- | | |
|---|---|
| 1 Press [MENU] . | |
| 2 Scroll to “Initial setting” by pressing [▼] or [▲] , then press Select . | |
| 3 Scroll to “Set tel line” by pressing [▼] or [▲] , then press Select . | <div>Set tel line
⏮Back ▼▲ Select⏭</div> |
| 4 Scroll to “Set flash time” by pressing [▼] or [▲] , then press Select . | <div>Set flash time
⏮Back ▼▲ Select⏭</div> |
| 5 Select the desired time by pressing [▼] or [▲] . | <div>Set flash time
:700ms
⏮Back ▼▲ Save⏭</div> |
| 6 Press Save , then press [OFF] . | |

Incoming Call Tone Handset

During an intercom call (p. 36), you can be informed of incoming calls by two tones. If this feature is turned on, incoming call tones will be heard for as long as the line is ringing. If this feature is set to “2”, incoming call tones will be heard only 2 times. If this feature is turned off, no tones will be heard. The factory preset is “2”.

- | | |
|--|---|
| 1 Press [MENU] . | |
| 2 Scroll to “Ringer setting” by pressing [▼] or [▲] , then press Select . | |
| 3 Scroll to “Incoming call.” by pressing [▼] or [▲] , then press Select . | <div>Incoming call.
⏮Back ▼▲ Select⏭</div> |
| 4 Select “On”, “Off” or “2” by pressing [▼] or [▲] . | <div>Incoming call
tone :2
⏮Back ▼▲ Save⏭</div> |
| 5 Press Save , then press [OFF] . | |

Key Tone **Handset**

You can select whether or not the handset keys will sound tones (key tone, confirmation tone, error tone). The factory preset is ON.

- 1 Press **[MENU]**.
- 2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press **Select**.
- 3 Scroll to "Key tone" by pressing **[▼]** or **[▲]**, then press **Select**.

Key tone
 ⏮Back ▼▲ Select⏭
- 4 Select "Off" or "On" by pressing **[▼]** or **[▲]**.

Key tone
 :On
 ⏮Back ▼▲ Save⏭
- 5 Press **Save**, then press **[OFF]**.

Re-registering the Handset **Handset & Base Unit**


If "No link to base. Move closer to base, try again." is displayed even when using the handset near the base unit, the handset may have lost communication with the base unit. You need to re-register the handset to the base unit.

- **Have both handsets and base unit nearby during registration.**
- **Follow steps 1 and 2 listed below. You have about 1 minute to complete them.**
- **Confirm the extension number of the handset which has lost the communication by placing the handset on the base unit or charger.**

If you re-register the handset using the other handset's extension number ([1] or [2]), the other handset will not function.

- 1 *Base unit:*
 To re-register the handset 1, press and hold **HANDSET LOCATOR** [⏮] until the CHARGE indicator flashes.
 To re-register the handset 2, press and hold **HANDSET LOCATOR** [⏮] until the CHARGE indicator flashes.

- 2 *Handset:*
 Press and hold **[FLASH/CALL WAIT]** until "Handset Registering" is displayed.
 - When registration is complete, a beep sounds from the handset and the display shows the number.
 - **Wait for 20 seconds after registration is complete while the handset establishes communication with the base unit.**

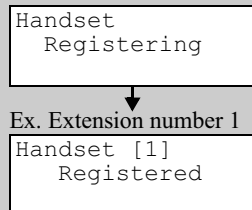


- If the handset beeps 3 times and "Error!!" is displayed, an error occurred. Try again from step 1.
- You can stop registration by pressing **[OFF]** on the handset, and pressing **HANDSET LOCATOR** [⏮] or [⏭] on the base unit.


Belt Clip

You can hang the handset on your belt or pocket using the included belt clip.

To attach the belt clip

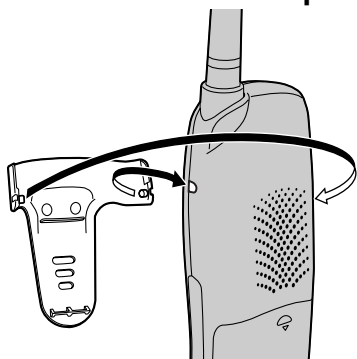

To remove the belt clip

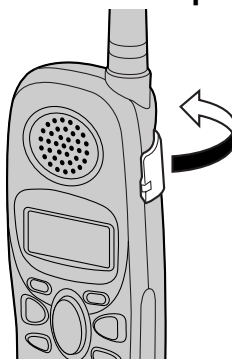


Optional Headset

Connecting an optional headset to the handset allows hands-free phone conversation. Please use only a Panasonic KX-TCA60, KX-TCA86, KX-TCA88, KX-TCA88HA, KX-TCA91, KX-TCA92, or KX-TCA98 headset. To order, call the accessories telephone number on page 2.

Connecting an optional headset

Open the headset jack cover, and insert the headset plug into the headset jack as shown below.

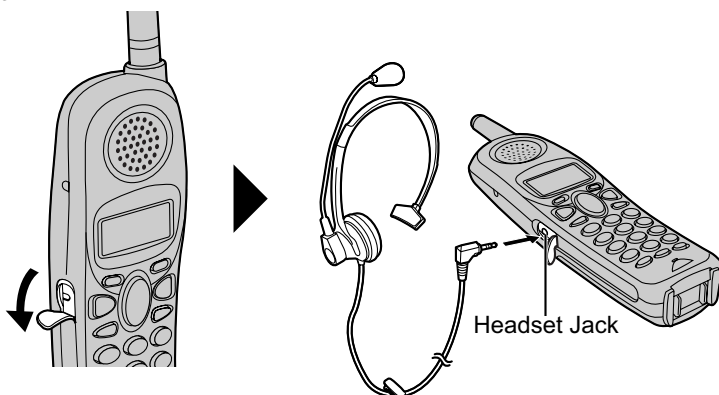

- Headset sold separately. Model shown here is KX-TCA88.

To switch to the speakerphone while using the headset:


Press [📞]. To return to the headset, press [📞].

Wall Mounting

This unit can be mounted on a wall phone plate.


Base unit

- 1 Press the tabs in the direction of the arrows (①), then remove the wall mounting adaptor (②).

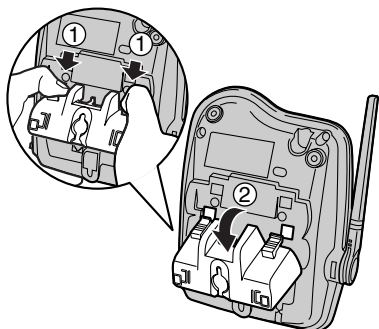


- 2 Connect the AC adaptor.

- Fasten the AC adaptor cord to prevent it from being disconnected.

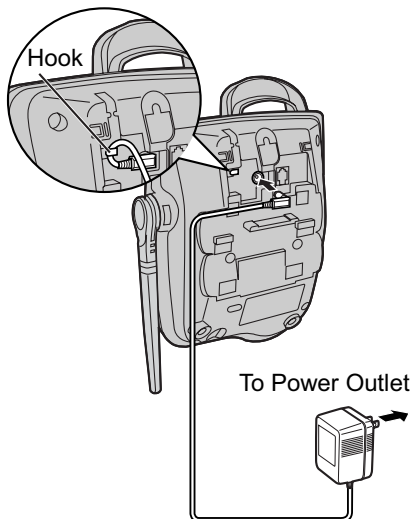


- 3 Tuck the telephone line cord inside the wall mounting adaptor, then push the adaptor in the direction of the arrows (① and ②) while pressing the tabs.

- The word "UP WALL" should face upward.

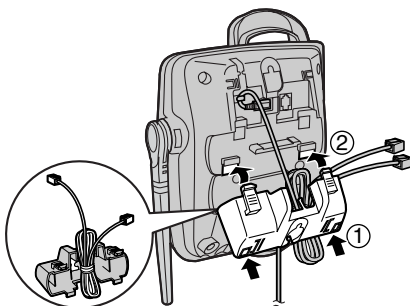

- 4 Connect the telephone line cord. Mount the unit, then slide it down.

- Raise the antenna.

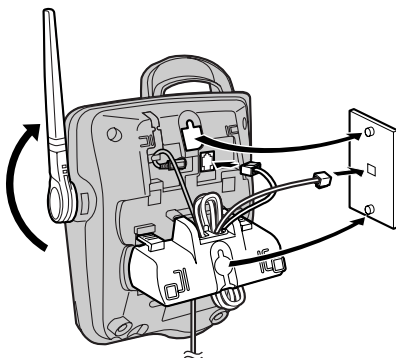


- 5 To charge the handset battery: Place the handset on the base unit.

- The unit beeps once and the CHARGE indicator lights.


Wall Mounting

Charger unit

The charger can be wall mounted. Connect the AC adaptor. Install screws using the wall template (see below). Mount the charger (①). Slide it down (②), then slide it down to the right (③) until it is secured.

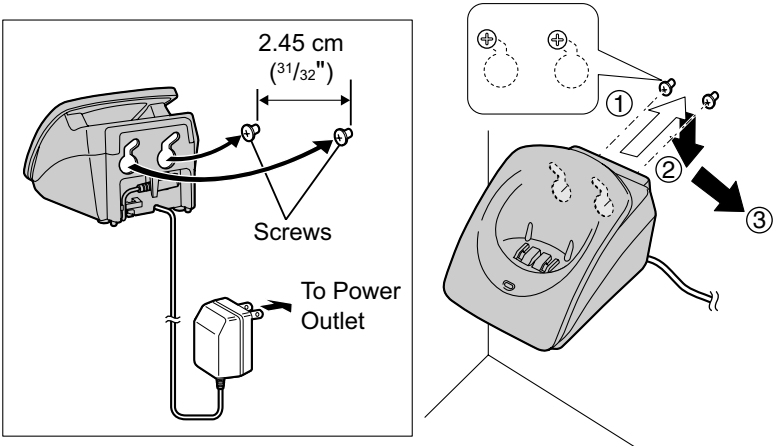

Wall Template for the Charger unit

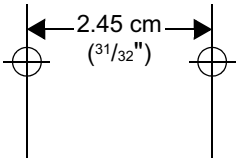

Direct Commands

Handset

After pressing **[MENU]**, you can also program menu items directly by pressing (**[0]** to **[9]**, and **[⏏]**) instead of using the soft keys.

Menu item	Command	Selection items	Page
Ringer volume	[1] [1]	[0] : Off [1] : Low [2] : Medium [3] : High	p. 15
Ringer tone	[1] [2]	[1] – [3] : Tone pattern 1 – 3 [4] – [7] : Melody pattern 1 – 4	p. 16
Incoming call tone	[1] [3]	[1] : On [2] : Twice [0] : Off	p. 44
V.M. access	[3]		p. 41
Voice enhancer	[5]	[1] : On [0] : Off	p. 20
Copy phone book –Copy 1 item	[⏏] [1]	Go to Step 4 on page 34.	—
Copy phone book –Copy all items	[⏏] [2]		p. 35
LCD contrast	[0] [1]	[1] – [6] : Level 1 – 6	p. 17
Key tone	[0] [2]	[1] : On [0] : Off	p. 45
Auto talk	[0] [3]	[1] : On [0] : Off	p. 14
Caller ID number auto edit	[0] [4]	[1] : On [0] : Off	p. 26
Set dial mode	[0] [5] [1]	[1] : Pulse [2] : Tone	p. 13
Set flash time	[0] [5] [2]	[1] : 700 ms [2] : 600 ms [3] : 400 ms [4] : 300 ms [5] : 250 ms [6] : 110 ms [7] : 100 ms [8] : 90 ms	p. 44
Set line mode	[0] [5] [3]	[1] : A [2] : B	p. 14
Store VM access#	[0] [7] [1]	Go to Step 5 on page 39.	—
VM tone detect	[0] [7] [2]	[1] : On [0] : Off	p. 40
Change language	[0] [8]	[1] : English [2] : Spanish	p. 13
Message alert	[0] [⏏]	[1] : On [0] : Off	p. 17

During programming:

When “Save” is displayed, press the right soft key **to save the new settings**.

To exit programming, press **[OFF]**.

- If you press the direct command incorrectly, press **[OFF]**, then re-enter programming mode by pressing **[MENU]**.
- For function details, see the corresponding pages.

If the Following Appear on Your Display...

The following will be displayed when the unit needs your attention.

Display message	Cause & Remedy
Recharge battery	• The battery needs to be charged. Recharge the battery (p. 9).
Charge for 6h	• The battery has been discharged. The handset will not work. Fully charge the battery (p. 9).
No link to base. Move closer to base, try again.	• The handset has lost communication with the base unit. Walk closer to the base unit and try again or re-register the handset (p. 45). • Confirm the base unit's AC adaptor is plugged in. • Raise the base unit antenna.
Please lift up and try again.	• A handset button was pressed while the handset was on the base unit or charger. Lift the handset and press the button again.
Busy	• Another handset is in use. Try again later. • The handset you are calling is too far from the base unit. Try again later.
Error!!	• When you tried to re-register the handset, the handset and base unit could not link for some reason, such as interference from electrical appliances. Move the handset and base unit away from any electrical appliances and try again. • Another handset tried to send phone book items to you but the copying stopped (p. 34, 35).
Phone book full	• When you tried to store an item in the phone book, the phone book memory was full. Press [OFF] to exit the programming mode. To erase other items from the phone book, see page 33.
System is busy. Please try again later.	• If another handset is in use, such as conducting outside calls, you may not be able to use the handset. Try again later. • The handset you tried to send phone book items to is in use. • The handset has lost communication with the base unit. Walk closer to the base unit and try again.

If the Following Appear on Your Display...

Display message	Cause & Remedy
---Incomplete--- Phone book full	When phone book item(s) was(were) sent to another handset, the phone book memory was full and copying stopped. Press [OFF] to exit (p. 34, 35). To erase items from another handset phone book, see page 33. You can copy all of the items again or copy the items which have not been copied one by one (p. 34, 35).
Example Tom Jones 555-765-4321	When you tried to send phone book items, the other handset lost communication with the base unit, or the other handset made an outside call by pressing [↶] or [↷]. The handset displays the phone book item which was not copied to the other handset. Press [OFF], then try again (p. 34, 35).
No items stored	Your phone book is empty. No items were copied to another handset.
Line in use	Another handset is conducting an outside call or a parallel connected telephone is in use.
Line on hold	Another handset is on hold for an outside call.
Store VM access#	You have not stored the voice mail access number. Store the number (p. 39).

Troubleshooting

If the handset display shows error messages, see “If the Following Appear on Your Display...” (p. 50–51) for the Cause & Remedy.

Problem	Cause & Remedy
“No link to base. Move closer to base, try again.” is displayed and an alarm tone sounds.	• You are too far from the base unit. Walk closer to the base unit. • Confirm the base unit’s AC adaptor is plugged in. • Raise the base unit antenna. • If the above remedies do not solve the problem, the handset may have lost communication with the base unit. Register the handset again (p. 45).
The handset and/or base unit does not work.	• Check the settings (p. 8–10). • Check whether the dialing mode setting is correct (p. 13). • Fully charge the battery (p. 9). • Clean the charge contacts and charge again (p. 10). • Check battery Installation (p. 9). • Unplug the base unit’s AC adaptor to reset it. Plug in, and try again. • Re-install the battery (p. 9) and fully charge it.
Static, sound cuts in/out, fades. Interference from other electrical units.	• Move the handset and base unit away from other electrical appliances (p. 3). • Walk closer to the base unit. • Raise the base unit antenna.
The handset does not ring.	• The ringer volume is turned off. Set to high, medium, or low (p. 15).
The handset display is blank.	• If the handset display is blank, fully charge the battery (p. 9).
You cannot program any function items.	• Programming is not possible while the handset and/or base unit is being used. • Do not pause for over 60 seconds while programming. • Walk closer to the base unit.
While programming or searching, the handset starts to ring and the program/search stops.	• A call is coming in. To answer the call, press  or . Start again from the beginning after hanging up.

Troubleshooting

Problem	Cause & Remedy
You cannot make an intercom.	- The handset you called is too far from the base unit. - If the handset or base unit is in use, you may not be able to make a call. Try again later.
You cannot redial.	If the last number dialed was more than 48 digits long, the number will not be redialed correctly.
You cannot make long distance calls.	Please make sure you have long distance service.
The handset does not display the caller's name and/or phone number.	- You need to subscribe to Caller ID. - Other telephone equipment may be interfering with your phone. Disconnect it and try again. - Other electrical appliances connected to the same outlet may be interfering with Caller ID. - Telephone line noise may be affecting Caller ID. - The caller requested not to send his/her Caller ID information (p. 22). - If a call is being transferred to you, the Caller ID information will not be displayed. - If a (separate) Caller ID box is connected between the unit and the telephone wall jack, disconnect the Caller ID box or plug the unit directly into the wall jack.
The handset cannot automatically edit the Caller List/incoming phone numbers.	- The Caller ID number auto edit feature is turned off. Turn it on (p. 26) and try again. - You need to press [↶] or [↷] after editing the number.
The handset display exits the Caller List or phone book.	Do not pause for over 60 seconds while searching.
"Recharge battery" is displayed, "🔋" flashes, or the handset beeps intermittently.	Fully charge the battery (p. 9).
"Charge for 6h" and "🔋" are displayed and the handset does not work.	- The battery has been discharged. Fully charge the battery (p. 9). - Check battery installation (p. 9).

Troubleshooting

Problem	Cause & Remedy
You charged the battery fully, but "Recharge battery" is still displayed and/or "  continues to flash, or "Charge for 6h" and "  are displayed.	• Clean the charge contacts and charge again (p. 10). • The battery may need to be replaced. If you install a new battery, fully charge it (p. 9).
The CHARGE indicator does not go out after the battery has been charged.	• This is normal.
The Ringer/Message Alert indicator flashes slowly when the handset is not ringing and in use.	• The Message Alert is turned on and new messages in your voice mailbox have been recorded. Turn the Message Alert off (p. 17) or listen to the new messages (p. 41).
You cannot have a conversation using the headset.	• Make sure the optional headset is connected properly (p. 46). • If "SP-phone" is displayed, press [] to switch to the headset.
If you cannot solve your problem	• Visit our website: http://www.panasonic.com/support • Contact us via the web at: http://www.panasonic.com/contactinfo • Call our customer call center at: 1-800-211-PANA(7262)

Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicer when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicer when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicer.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

Important Safety Instructions

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

FCC and Other Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

Registration No. (found on the bottom of the unit)

Ringer Equivalence No. (REN)0.1B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

FCC and Other Information

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Servicenter or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

WHEN PROGRAMMING EMERGENCY NUMBERS AND(OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce, or eliminate, interference.

FCC and Other Information

Operating near 2.4GHz electrical appliances may cause interference. Move away from the electrical appliances.

FCC RF Exposure Warning:

This product complies with FCC radiation exposure limits set forth for an uncontrolled environment. To comply with FCC RF exposure requirements the base unit must be installed and operated with its antenna located 20 cm or more between antenna and all person's body (excluding extremities of hands, wrist and feet). The handset unit may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided. The base and handset units must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

A TIA/EIA-IS-968 compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is also TIA/EIA-IS-968 compliant.

- **Environment** — do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- **Medical** — consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 2400MHz to 2481MHz, and the power output level can range 0.04 to 0.1 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.
- **Routine care** — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
- **If there is any trouble** — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult your telephone company.

Index

A

- Accessories 2
- Answering calls 21
- Auto talk 14, 21

B

- Backlit LCD 20
- Base unit location 3
- Battery charge 3, 9
- Battery information* 10
- Battery replacement 10
- Battery strength 9
- Belt clip 46

C

- Call share 38
- Call Waiting Caller ID display . . . 43
- Call waiting tone 43
- Caller ID number auto edit* 26
- Caller ID service 22
- Caller List, editing 25
- Caller List, erasing 28
- Caller List, storing 27
- Caller List, viewing 23
- Calling back from the Caller List . . 24
- Chain dial* 32
- Conf (Conference) 38
- Conference calls 38
- Copy phone book* 34, 35

D

- Dialing mode 13
- Direct commands 49
- Display language 13

E

- Error messages 50
- Extension number 36

F

- FCC and other information 56
- FLASH button 44
- Flash time 44
- Function menu,*
 Direct commands 49
- Function menu, selection 11
- Function menu, table 12

H

- Handset locator 42
- Headset, optional 46
- Hold 19

I

- Incoming call tone 44
- Installation, AC adaptor 8
- Installation, battery 9
- Installation, charger unit 8
- Installation, telephone line cord . . 8
- Intercom call 36
- Intercom, paging 36

K

- Key tone 45

L

- LCD contrast 17
- Lighted handset keypad 20
- Line mode 14
- Location of controls 6

M

- Making calls 18, 19
- Message alert* 17
- Microphone 18
- Mute 42

N

- Navigator key 7
- Noise 3

P

- Pause 43
- Phone Book* 29
- Phone book, copying* 34, 35
- Phone book, dialing 31
- Phone book, editing 33
- Phone book, erasing 33
- Phone book, names 30
- Phone book, storing 29
- Power failure 8
- Pulse service 42

Index

R

- Redial 19
- Redial list 19
- Registration* 45
- Ringer off 15, 21
- Ringer tone 16
- Ringer volume 15
- Rotary service, tone dialing 42

S

- Safety instructions 55
- Shipping product for
service Back Cover
- Soft keys 7
- Specifications 63
- SP-phone 18

T

- Transferring a call.* 37
- Troubleshooting 52
- TTY 2, 62, Back Cover

V

- VE (Voice Enhancer) 20
- VM (Voice Mail)* 39
- Voice enhancer technology* 20
- Volume control 19

W

- Wall mounting 47
- Warranty 61

- “—” indicates important information and frequently used features.

PANASONIC CONSUMER
ELECTRONICS COMPANY, DIVISION
OF MATSUSHITA ELECTRIC
CORPORATION OF AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF MATSUSHITA
ELECTRIC OF PUERTO RICO, INC.,
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Telephone Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Parts

One (1) Year

Labor

One (1) Year

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company Customer Servicenter
Suite B 4900 George McVay Drive McAllen, TX 78503

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

For Limited Warranty service for headsets if a headset is included with this product please call Panasonic Call Center at 1-800-211-PANA (7262).

When shipping the unit carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at: 1-800-211-PANA (7262),
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express,
and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

Service in Puerto Rico

***Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company
Factory Servicenter:***

***Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,
Carolina, Puerto Rico 00985***

Phone (787)750-4300, Fax (787)768-2910

Specifications

- Base Unit

Power Supply:

AC Adaptor (120 V AC, 60 Hz)

Power Consumption:

Standby: Approx. 2.1 W
Maximum: Approx. 5.0 W

Frequency:

2.40 GHz – 2.48 GHz

Dimensions (H x W x D):

Approx. 124 mm x 155 mm x 174 mm
(4 ⁷/₈" x 6 ³/₃₂" x 6 ²⁷/₃₂")

Mass (Weight):

Approx. 330 g (0.73 lb.)
- Charger

Power Supply:

AC Adaptor (120 V AC, 60 Hz)

Power Consumption:

Standby: Approx. 0.8 W
Maximum: Approx. 4.0 W

Dimensions (H x W x D):

Approx. 69 mm x 74 mm x 99 mm
(2 ²³/₃₂" x 2 ²⁹/₃₂" x 3 ²⁹/₃₂")

Mass (Weight):

Approx. 110 g (0.24 lb.)
- Handset

Power Supply:

Ni-MH battery (3.6 V, 830 mAh)

Frequency:

2.40 GHz – 2.48 GHz

Dimensions (H x W x D):

Approx. 208 mm x 52 mm x 39 mm
(8 ³/₁₆" x 2 ¹/₁₆" x 1 ¹⁷/₃₂")

Mass (Weight):

Approx. 190 g (0.42 lb.)

Security Codes:

1,000,000
- Dialing Mode:

Tone (DTMF)/Pulse
- Operating Environment:

5 °C – 40 °C (41 °F – 104 °F)

Specifications are subject to change without notice.

For your future reference

Serial No.

Date of purchase

(found on the bottom of the unit)

Name and address of dealer

For product service

- Visit our website: <http://www.panasonic.com/support>
- Contact us via the web at: <http://www.panasonic.com/contactinfo>
- Call us at: 1-800-211-PANA(7262)

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

- Send the unit to an authorized servicer, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono inalámbrico fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

**If you need assistance with the setup or operation,
please call 1-800-211-PANA(7262)**

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America**
One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.**
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.

PQQX13989YA F1203-1014 ©

Instrucciones de funcionamiento

Gracias por la adquisición de su nuevo teléfono inalámbrico Panasonic.

• Guarde este manual para futuras consultas.

Compruebe los accesorios:


- | | |
|---|--|
| □ Adaptador de CA 1 | □ Cubierta de la unidad portátil . . . 2 |
| □ Cable de línea telefónica 1 | □ Presilla para el cinturón. 2 |
| □ Batería 2 | □ Unidad de carga 1 |

Instalación de la unidad

1 Conecte como se muestra.

Unidad base


Asegure el cable del adaptador de CA para evitar que se desconecte.

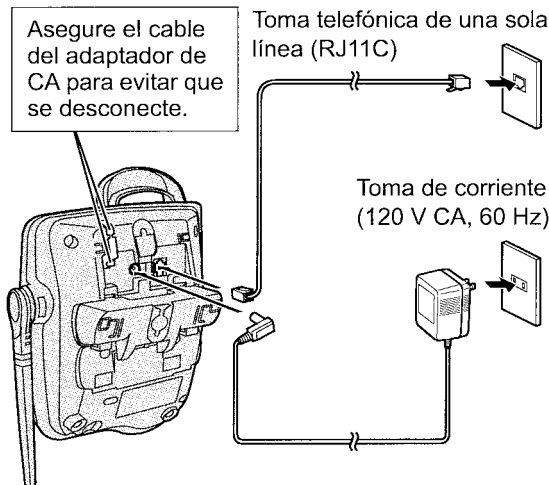

• Unidad base: USAR SÓLO CON EL ADAPTADOR DE CA PQLV1 de Panasonic.

Unidad de carga

Toma de corriente
(120 V CA, 60 Hz)

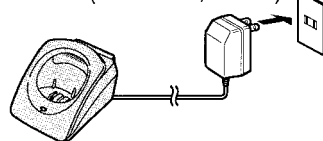


• Unidad de carga: USAR SÓLO CON EL ADAPTADOR DE CA KX-TCA1 de Panasonic.

Para obtener un mayor radio de acción y un funcionamiento sin ruidos, coloque la unidad base en un lugar ELEVADO y CÉNTRICO, sin obstáculos ni interferencias provenientes de aparatos eléctricos.

• El adaptador de CA debe permanecer conectado en todo momento.

2 Instale la batería en la unidad portátil.


Inserte la batería (①), y empújela hacia abajo hasta que encaje con un chasquido en el compartimento (②). Cierre la cubierta.

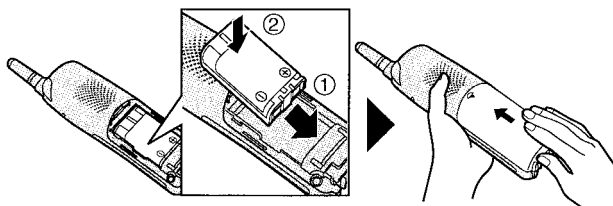

3 Cargue la batería durante 6 horas antes de empezar a usar la unidad.


Coloque la unidad portátil sobre la unidad base y la unidad de carga.

- La unidad emite un pitido, el indicador CHARGE se ilumina, y "Cargando" aparece en pantalla.
- Cuando la batería está completamente cargada, aparece "Carga completada".

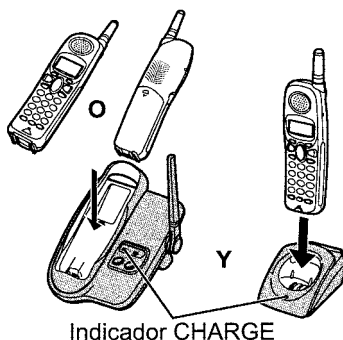


Utilización de la unidad

Levante la antena de la unidad base para obtener la mejor recepción.

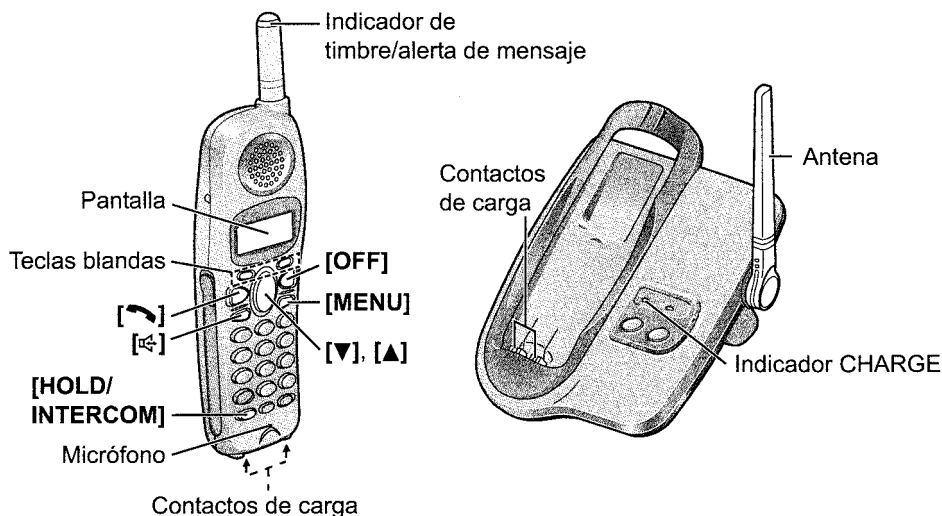

Importante: A lo largo de estas instrucciones de funcionamiento, **Unidad portátil** se usa para indicar una operación que se puede ejecutar con la unidad portátil.

Cómo usar las teclas blandas



Se usan dos teclas blandas para seleccionar las funciones que aparecen justo encima de cada tecla. Las funciones visualizadas encima de las teclas cambiarán conforme al estado de uso.



En esta pantalla de muestra, aparece "Mudo" encima de la tecla blanda.

Si se presiona la tecla blanda derecha, se selecciona el silenciamiento "Mudo".

A lo largo de estas instrucciones de funcionamiento, las teclas blandas quedan identificadas por las indicaciones que aparecen encima de ellas.

Ej. "Presione Mudo." indica "Presione la tecla blanda que está debajo de Mudo".

Atención:

- Recargue la batería cuando:
 - “Recargar batería” aparece en la unidad portátil,
 - “” parpadea, o
 - la unidad portátil emita pitidos intermitentes mientras está en uso.
- Si la batería se ha descargado, la unidad portátil mostrará en pantalla “Cargar por 6H” y “” cuando se coloque la unidad portátil sobre la unidad base o la unidad de carga. La unidad portátil no funcionará a no ser que la batería esté cargada. Siga cargando.
- Limpie los contactos de carga de la unidad portátil, de la unidad base y de la unidad de carga con un paño suave y seco una vez al mes. Límpielos más a menudo si la unidad está sometida a grasa, polvo o a humedad de nivel alta. De lo contrario, puede que la batería no se cargue correctamente.

Para usar una presilla para el cinturón o un auricular opcional (nº. de pedido: KX-TCA60, KX-TCA86, KX-TCA88, KX-TCA88HA, KX-TCA91, KX-TCA92, o KX-TCA98), consulte la página 46 en las instrucciones de funcionamiento en inglés.

Preparativos programables

Asegúrese de que la unidad portátil y la unidad base no se están utilizando. La unidad portátil debe operarse cerca de la unidad base cuando se encuentre descolgada de la misma o de la unidad de carga.

① Selección del idioma de la pantalla **Unidad portátil**

Puede seleccionar “English” (Inglés) o “Español” como el idioma de la pantalla. El idioma preconfigurado en fábrica es “English” (Inglés).

Presione [MENU] ➡ [▼] o [▲] para seleccionar “Initial setting” ➡
➡ Select ➡ [▼] o [▲] para seleccionar “Change language” ➡ Select ➡
➡ Español o English ➡ Salvar o Save ➡ [OFF]

② Selección del modo de marcación **Unidad portátil**

La preconfiguración de fábrica es “Tonos”. Si no puede marcar, ajústelo en “Pulsos”.

Presione [MENU] ➡ [▼] o [▲] para seleccionar “Ajuste inicial” ➡
➡ Selec. ➡ [▼] o [▲] para seleccionar “Ajustes de línea” ➡ Selec. ➡
➡ Selec. en “Modo de marcado” ➡
➡ [▼] o [▲] para seleccionar “Pulsos” o “Tonos” ➡ Guard ➡ [OFF]

③ Ajuste de la contestación automática **Unidad portátil**

Esta función permite contestar llamadas simplemente levantando la unidad portátil de la unidad base o de la unidad de carga sin presionar [📞] o [📞]. La preconfiguración de fábrica es “Apagada”.

Presione [MENU] ➡ [▼] o [▲] para seleccionar “Ajuste inicial” ➡
➡ Selec. ➡ [▼] o [▲] para seleccionar “Cont. Automática” ➡ Selec. ➡
➡ [▼] o [▲] para seleccionar “Encendida” o “Apagada” ➡ Guard ➡ [OFF]

Para hacer llamadas

Unidad portátil

- 1 Presione [↶] o [↷], y a continuación marque un número de teléfono.
- 2 Para colgar, presione [OFF] o ponga la unidad portátil en la unidad base o en la unidad de carga.

Para marcar después de confirmar el número introducido, teclee un número de teléfono y presione [↶] o [↷].

- Para ajustar el volumen del receptor/altavoz, presione [▼] o [▲] durante una conversación. El receptor dispone de 3 niveles (Alto, Medio y Bajo) disponibles. El altavoz dispone de 6 niveles. Con cada presión, cambiará el volumen.
- **Para poner una llamada en espera**, presione [HOLD/INTERCOM]. Cuando se visualice “Línea en espera.”, presione de nuevo [HOLD/INTERCOM]. **Para regresar a la llamada**, presione [↶] o [↷].

Para contestar llamadas

Unidad portátil

Presione [↶] o [↷].

- También puede contestar a una llamada presionando cualquier botón excepto [▼], [▲] u [OFF].
- Si activa la función de contestación automática (pág. 3), podrá contestar una llamada simplemente levantando la unidad portátil de la unidad base o del cargador.

Servicio de identificación de la persona que llama

Esta unidad es compatible con el servicio de identificación de la persona que llama ofrecido por su compañía telefónica. Si usted se suscribe a un servicio de identificación de la persona que llama, los nombres y números de teléfono de las personas que llaman aparecerán en pantalla y se registrarán en la lista de personas que llaman.

Cómo se visualiza la información de la persona que llama

Cuando entra una llamada, suena la unidad y se recibe la información de identificación de la persona que llama. La pantalla mostrará la información de la persona que llama.*

Ejemplo

ROBINSON, TINA
1-555-222-3333

- Después de contestar la llamada, la pantalla indicará la duración de la llamada.

*Pantalla de nombre personalizada

Si recibe una llamada de uno de los números guardados en el directorio telefónico, la unidad portátil mostrará el nombre de la persona que llama tal y como éste figura en el directorio, en lugar de como aparecería el nombre entrante.

- Si la unidad no recibe información de identificación de la persona que llama, la pantalla indicará alguno de los mensajes siguientes:

Pantalla	Significado
Fuera de área	El interlocutor llama desde una zona que no dispone de servicio de identificación de la persona que llama.
Llamada privada	La persona que llama ha solicitado no enviar su información.
Larga distancia	El interlocutor llama desde larga distancia.

- Si su unidad está conectada a una centralita PBX que no soporta la identificación de la persona que llama, usted no podrá acceder al servicio de identificación de la persona que llama.
- El servicio de indicación de nombre puede no estar disponible en algunas zonas. Para más información, póngase en contacto con su compañía telefónica.

Uso de la lista de personas que llaman

La unidad puede grabar la información de hasta 30 personas que llaman diferentes y guardar estos datos en la lista de personas que llaman. La información de las personas que llaman está ordenada de la llamada más reciente a la más antigua. Cuando se recibe la llamada número 31, se borra la información de la primera llamada.

Para ver la lista de personas que llaman **Unidad portátil**

Significado de la indicación:

2 Llam.sin Rev. : La pantalla muestra el número de llamadas que no se han revisado.
Llamadas. : Indica la información que usted recibe de la persona que llama.

1 Presione **Llamadas** , [▼], o [▲] para entrar en la lista de personas que llaman.

Ej. 2 llamadas no revisadas.

2 Llam.sin Rev.
Llama- Direc-
das. torio.

2 Para buscar a partir de la llamada más reciente, presione [▼].

2 Llam.sin Rev.
▼▲=Ver lista
↵Borrar todas

Para buscar a partir de la llamada más antigua, presione [▲].

Ejemplo

SMITH, JACK
3:10P JUN.29
↵Borrar Selec.↵

- Aparecen en pantalla el nombre y el número de teléfono de la persona que llama, y la hora y la fecha de la llamada. El nombre y el número de teléfono aparecen alternadamente, como se muestra a la derecha.

- Si no se dispone de información de nombre de una persona que ha llamado, y no ha guardado su nombre y número de teléfono en el directorio telefónico la pantalla sólo mostrará el número de teléfono.

1-555-333-4444
3:10P JUN.29
↵Borrar Selec.↵

3 Presione [OFF] para salir de la lista.

Lo que significa "✓"

"✓" indica que usted ya ha revisado la información de esta llamada, o que ha contestado a la misma. Si la misma persona llama de nuevo, el registro de llamada con "✓" será reemplazado por el nuevo registro de llamada.

SMITH, JACK
3:10P JUN.29 ✓

Si alguien llama más de una vez

Aparece en pantalla el número de veces que ha llamado una misma persona ("x2" a "x9"). Se grabará la fecha y la hora de la llamada más reciente. Después de revisar la información de la persona que ha llamado, "x2" a "x9" será reemplazado por "✓".

Ej. Ha llamado 2 veces.

TURNER, CINDY
11:20A JUN.12 x2

Devolución de la llamada desde la lista de personas que llaman

Unidad portátil

1 Presione **Llamadas** , [▼], o [▲] para entrar en la lista de personas que llaman.

2 Vaya hasta la persona a la que desee llamar presionando [▼] o [▲].

3 Presione [↶] o [↷].

- En el paso 2, si hace falta, modifique el número de teléfono presionando **Selec.** , y luego **Editar** , siguiendo las instrucciones de la pantalla. El número de teléfono será modificado conforme a uno de los 3 modelos disponibles. (Para conocer los detalles, consulte la página 25 de las instrucciones de funcionamiento en inglés.)

Uso del directorio telefónico

Se pueden guardar hasta 30 nombres y números de teléfono en el directorio de la unidad portátil. Todos los elementos del directorio telefónico están ordenados alfabéticamente por la primera palabra. Se puede efectuar una llamada seleccionando un nombre o un número de teléfono desde el directorio.

Almacenamiento de nombres y números de teléfono

Unidad portátil

Asegúrese de que la unidad portátil y la unidad base no se están utilizando. La unidad portátil debe operarse cerca de la unidad base cuando se encuentre descolgada de la misma o de la unidad de carga.


- 1 Presione **Directorio**.
- 2 Presione **Añadir**.
- 3 Introduzca un nombre de hasta 16 caracteres por medio de los botones de marcación ([0] a [9]) (ver más abajo), y luego presione [▼].
- 4 Introduzca un número de teléfono de hasta 32 dígitos, y luego presione [▼].
- 5 Presione **Guardar**, y luego presione [OFF].

Selección de caracteres para la introducción de nombres

Introduzca los nombres por medio de los botones de marcación. Presione el botón correspondiente hasta que aparezca el carácter deseado.

- Presionando el botón correspondiente se seleccionan los distintos caracteres en el orden mostrado a continuación.

Teclas	Caracteres	Teclas	Caracteres
[1]	# & ' () * , - . / 1	[6]	m n o M N O 6
[2]	a b c A B C 2	[7]	p q r s P Q R S 7
[3]	d e f D E F 3	[8]	t u v T U V 8
[4]	g h i G H I 4	[9]	w x y z W X Y Z 9
[5]	j k l J K L 5	[0]	0 Espacio
◀	Borra el carácter situado a la izquierda.		
▶	Mueve el cursor a la derecha. (Para introducir otro carácter por medio de la misma tecla numérica, mueva el cursor al siguiente espacio.)		

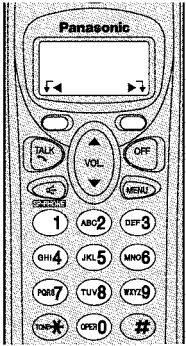

- Si comete un error al introducir un nombre o un número, utilice ◀ para borrar el carácter incorrecto. Cada vez que presiona ◀, se borra un carácter. A continuación introduzca el carácter correcto. Para borrar todos los caracteres, mantenga presionado el botón ◀.

Marcación desde el directorio telefónico

Unidad portátil

- 1 Presione **Directorio**.
 - 2 Presione **Buscar**.
 - 3 Vaya hasta el elemento deseado. Para desplazar hacia abajo, presione [▼]. Para desplazar hacia arriba, presione [▲].
 - **Para buscar un nombre por su inicial:** Presione el botón de marcación correspondiente a la primera letra del nombre deseado hasta que se visualice algún nombre con dicha inicial. Presione [▼] repetidamente hasta que aparezca el nombre deseado.
 - 4 Presione [↶] o [↷].
- Para salir del directorio telefónico, presione [OFF].

Servicio de correo de voz

El correo de voz es un servicio de contestación automática ofrecido por su compañía telefónica. Si usted se suscribe a este servicio, el sistema de correo de voz de su compañía telefónica puede contestar a las llamadas cuando usted no está disponible para hacerlo o cuando su línea está ocupada. Las personas que llaman pueden dejar sus mensajes en buzones de voz virtuales, mantenidos para usted por la compañía telefónica, lo que le permite escucharlos cuando más le convenga. La unidad le comunicará que alguien le ha dejado un mensaje de voz (ver más abajo). Una vez que haya guardado su número de acceso al correo de voz, puede acceder a su buzón de voz con sólo presionar **[MENU]** en la unidad portátil, y seleccionar luego **Selecc.** en "Acceso a V.M."

Para guardar el número de acceso al correo de voz

Unidad portátil

Asegúrese de que la unidad portátil y la unidad base no se están utilizando. La unidad portátil debe operarse cerca de la unidad base cuando se encuentre descolgada de la misma o de la unidad de carga.

Presione **[MENU]** ➡ **[▼]** o **[▲]** para seleccionar "Ajuste inicial" ➡
➡ **Selecc.** ➡ **Selecc.** en "Voice Mail" ➡
➡ **Selecc.** en "Guardar # de VM" ➡ Número de acceso (hasta 32 dígitos) ➡
➡ **[MENU]** para guardar su configuración ➡ **[OFF]**

Para borrar el número de acceso al correo de voz guardado

Presione **[MENU]** ➡ **[▼]** o **[▲]** para seleccionar "Ajuste inicial" ➡ **Selecc.** ➡
➡ **Selecc.** en "Voice Mail" ➡ **Selecc.** en "Guardar # de VM" ➡
➡ Mantenga presionado ◀ hasta que se borren todos los dígitos. ➡ **[MENU]** ➡
➡ **[OFF]**

Para escuchar los mensajes del correo de voz Unidad portátil

La unidad le comunicará que alguien le ha dejado un nuevo mensaje de voz:

- a) "Voice Mail" aparecerá en la pantalla de la unidad portátil, y
- b) el indicador de timbre/alerta de mensaje de la unidad portátil parpadeará lentamente si la alerta de mensaje está activada y si la unidad portátil no se está utilizando. (Para conocer los detalles, consulte la página 17 en las instrucciones de funcionamiento en inglés.)

1 Presione **[MENU]**.

2 Presione **Selecc.** en "Acceso a V.M."

- La unidad portátil se conecta a la línea telefónica y marca el número de acceso (ver más arriba) en el modo de altavoz.
- Si suenan 3 pitidos y aparece en la pantalla de la unidad portátil "Guardar # de VM", significa que no se ha guardado un número de acceso al correo de voz. Para guardar el número, consulte más arriba.

Acceso a V.M.
↙Atrás ▼▲Selecc.▼



Marcar # de V.M.
↙(VE) Mudo↙


3 Siga las instrucciones pregrabadas.

4 Cuando termine, presione **[OFF]**.

- También puede oír sus mensajes de correo de voz usando [📞] o [📞].

1. Presione [📞] o [📞].

2. Presione **VM** antes de que pasen 15 segundos.



- Al cabo de 15 segundos, "VM" desaparecerá de la pantalla y aparecerá "(VE)".

- Si no se ha guardado un número de acceso al correo de voz, no se visualizará "VM". Para guardar el número, consulte la página 7.

3. Siga las instrucciones pregrabadas.

4. Cuando termine, presione **[OFF]**.

- Si la unidad portátil sigue indicando que tiene nuevos mensajes incluso después de que usted los haya escuchado, apague los indicadores de correo de voz manteniendo presionado **[OFF]** hasta que la unidad portátil emita un pitido. "Voice Mail" desaparecerá y el indicador de timbre/alerta de mensaje se apagará.
- Si su servicio de correo de voz utiliza un tono de correo de voz, y el mensaje grabado excede los 3 minutos de duración, "Voice Mail" puede no aparecer en pantalla y el indicador de timbre/alerta de mensaje puede no parpadear lentamente.
- Si su servicio de correo de voz utiliza un tono de correo de voz, el tono se oír desde cualquier teléfono conectado en paralelo. Si utiliza otro teléfono para recibir los mensajes, deberá marcar su número de acceso manualmente.